

Griffschutz

BMW R 1200 GS
für Modell mit Handschutz

BMW R 1200 GS Adventure

Artikel-Nr.:
420.655-01 schwarz

Seitenkoffer
Topcases
Gepäckträger
Lock it System
Softbags
Aluminiumkoffer
Lederkoffer
Schutzbügel
Hauptständer
Chopper-Parts
Quad-Parts
Accessoires



Montageanleitung

Der Bausatz umfaßt die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	700007785	Griffschutz links
1	700007786	Griffschutz rechts
2	151.352	Inbusschrauben M10x110 (Festigkeit 10.9)
2	151.353	Inbusschrauben M8x50 (Festigkeit 10.9)
2	150.811	U-Scheiben Ø10,5
2	150.810	U-Scheiben Ø8,4
2	151.354	Stahldistanzen Ø18xØ11x13mm
2	151.355	Stahldistanzen Ø15xØ9x13mm

HINWEIS:

Bei den Adventure-Modellen ist der Handschutz serienmäßig, hier passt der Griffschutz.

Bei der normalen R1200 GS kann der Handschutz von BMW nachgerüstet werden, in diesem Fall passt der Griffschutz ebenfalls.



Anzugsmomente des Motorradherstellers beachten!
Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!



Hepco & Becker GmbH
An der Steinmauer 6

D-66955 Pirmasens

Tel.: 06331 - 1453 - 100

Fax: 06331 - 1453 - 120

eMail: vertrieb@hepco-becker.de

www.hepco-becker.de

Griffschutz

BMW R 1200 GS
für Modell mit Handschutz

BMW R 1200 GS Adventure

Artikel-Nr.:
420.655-01 schwarz

Seitenkoffer
Topcases
Gepäckträger
Lock it System
Softbags
Aluminiumkoffer
Lederkoffer
Schutzbügel
Hauptständer
Chopper-Parts
Quad-Parts
Accessoires



Montageanleitung

Achtung !
Immer nur eine Seite nach der anderen montieren, damit sich der Lenker nicht verstellt.

Befestigung des Griffschutzes seitlich links und rechts:

An den Lenkerenden mit der Originalschraube über dem Handschutz.
Die Original Senkscheibe entfällt.




Befestigung des Griffschutzes oben links und rechts:

über der Lenkerverschraubung, die Originalschrauben entfallen.


Vordere Verschraubung: ①
in die Bohrungen der Lenkerbefestigung die Stahldistanzen $\varnothing 18 \times \varnothing 11 \times 13 \text{mm}$ stecken.

Die Verschraubung erfolgt mit den Inbusschrauben M10x110 sowie U-Scheibe $\varnothing 10,5$.

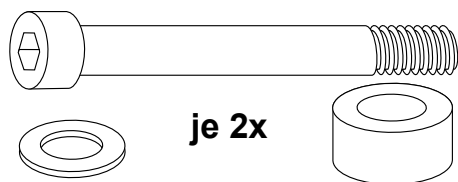

Hintere Verschraubung: ②
in die Bohrungen der Lenkerbefestigung die Stahldistanzen $\varnothing 15 \times \varnothing 9 \times 13 \text{mm}$ stecken.

Die Verschraubung erfolgt mit der Inbusschraube M8x50 sowie U-Scheibe $\varnothing 8,4$.

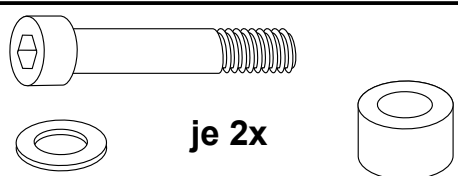

Handle protection set

BMW R1200 GS
for model with original hand protection

BMW R1200 GS Adventure

Item - No.:
420.655-01 black

Side cases
Top cases
luggage frames
Lock it system
Softbags
Aluminium luggage
Leather luggage
Protection bars
Center stands
Chopper parts
Quad parts
Accessories



Assembling instructions

The kit includes the following parts:

Quant	item no.	description
1	700007785	Handle protection left
1	700007786	Handle protection right
2	151.352	allen screws M10x110 (strength 10.9)
2	151.353	allen screws M8x50 (strength 10.9)
2	150.811	washer Ø10,4
2	150.810	washer Ø8,4
2	151.354	steel spacer Ø18xØ11x13mm
2	151.355	steel spacer Ø15xØ9x13mm

NOTICE:

This kits only fits with the original plastic hand protection (standard on adventure model).

On the normal R 1200 GS the original hand protection can be added - in this case the handle protection also fits.



Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Germany

Tel.: +49 6331 - 1453 - 100
Fax: +49 6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

Handle protection set

BMW R1200 GS
for model with original hand protection

BMW R1200 GS Adventure

Item - No.:
420.655-01 black

Side cases
Top cases
luggage frames
Lock it system
Softbags
Aluminium luggage
Leather luggage
Protection bars
Center stands
Chopper parts
Quad parts
Accessories




Assembling instructions

Mount one side after another, so that the handle bar do not adjust.



Fastening of the handle protection bar left and right:
at the the original handlebar over the plastic hand protector. Fix it with the original screw.
The original countersunk washer is obsolete.



Fastening of the handle protection bar left and right top:
at the handle bar bolting. Original screws are obsolete.
Top bolting: ①
put steel spacer $\text{Ø}18 \times \text{Ø}11 \times 13\text{mm}$ into the borings.
Fix the the handle protection with allen screws M10x110 with washer $\text{Ø}10,5$.

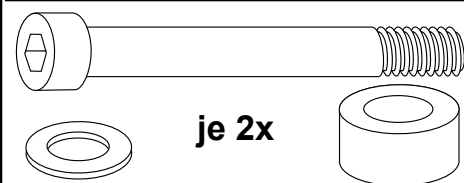

Lower fitting: ②
put steel spacer $\text{Ø}15 \times \text{Ø}9 \times 13\text{mm}$ into the borings.
Fix the the handle protection with allen screws M8x50 with washer $\text{Ø}8,4$.

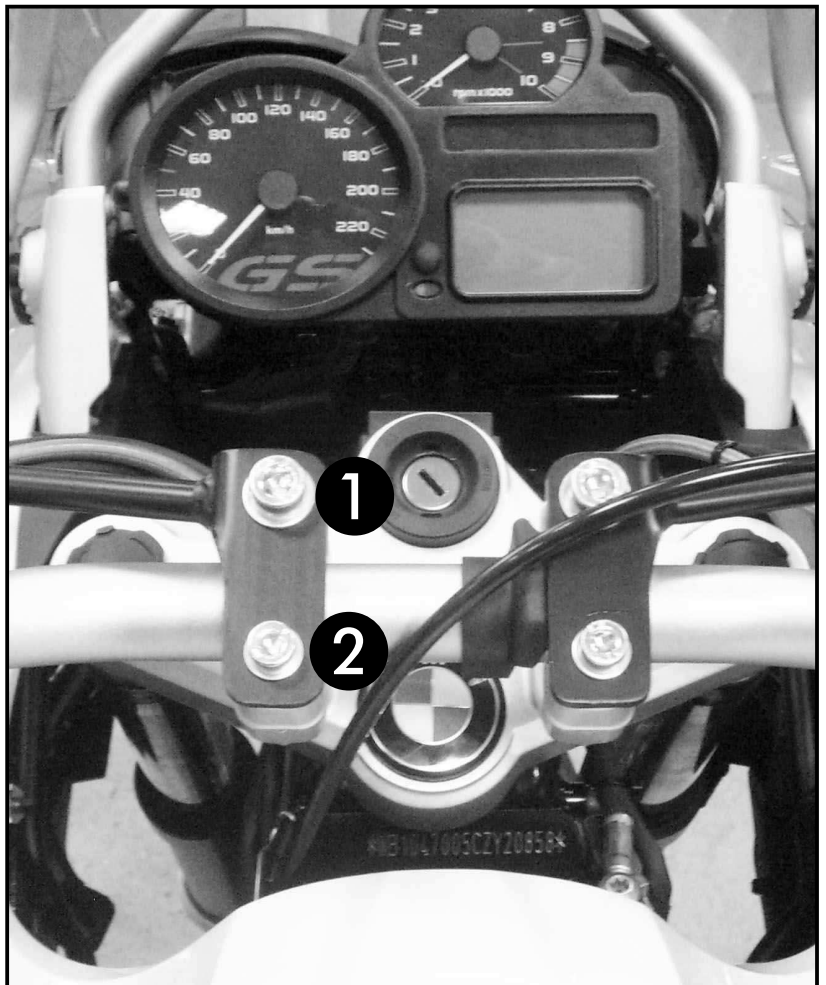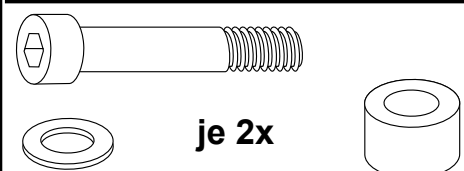

Luggage ideas.