

BMW S 1000 R

Art.-Nr.: 670.670 schwarz

Seitenkoffer  
Topcases  
Gepäckträger  
Lock it System  
Softbags  
Aluminiumkoffer  
Lederkoffer  
Schutzbügel  
Hauptständer  
Chopper-Parts  
Accessoires



## Montage

Der Bausatz umfaßt die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	700008554	Gepäckplatte
1	700007452	Gummiträger
1	700007453	Rastwinkel
2	151.331	Senkschrauben M5 x 50
3	151.330	Senkschrauben M5 x 25
2	151.169	Senkschrauben M6 x 40
2	275.001	Gummipuffer Ø20 x 5,5mm
2	150.799	selbstsichernde Muttern M6
5	270.111	selbstsichernde Muttern M5
4	151.283	Verschußstopfen Ø8 mm
2	151.109	Distanzhülsen Ø17 x Ø 7 x 6 mm
2	151.319	Distanzhülsen Ø10 x Ø 6 x 33 mm (Stahl verzinkt)
1	150.728	Distanzhülse Ø13 x Ø 7 x 7 mm
2	150.705	Distanzhülsen Ø18 x Ø 9 x 22 mm
1	151.356	Dichtband 20x40 94 cm
1	330.302	Logo Hepco & Becker ø30mm



### HINWEIS:

Das Originalschloss der Soziussitzbank wird benötigt.

Ein Tauschen zwischen Sitzbank und Sportrack ist somit nicht möglich.

Falls man nicht das Schloss von der Sitzbank demontieren möchte, ist auch ein passend codiertes Schloss beim BMW-Händler erhältlich.

### Anzugsmomente des Motorradherstellers beachten!

Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!

Bitte beachten Sie unsere beigefügten Serviceinformationen.

Als weiteres Zubehör lieferbar:

C-Bow Halter für Softtaschen

Art.-Nr.: 630.670



**Hepco & Becker GmbH**  
An der Steinmauer 6  
D-66955 Pirmasens

**Tel.: 06331 - 1453 - 100**  
**Fax: 06331 - 1453 - 120**  
**eMail: [vertrieb@hepco-becker.de](mailto:vertrieb@hepco-becker.de)**  
**[www.hepco-becker.de](http://www.hepco-becker.de)**



BMW S 1000 R

Art.-Nr.: 670.670 schwarz

## Montage

### Vorbereitung:



Schloss mit Halteplatte von Original Soziussitzbank demontieren. Die Originalschrauben entfallen.

Die beiden Bohrungen in der Original - Riegelabdeckung (siehe **A**, Bild auf Seite 3) müssen auf mindestens 5mm aufgebohrt werden, damit die Schrauben M5 x 50 durchpassen.

Die 2 x Gummipuffer in den Gummiträger stecken.  
 Gummiträger fluchtend mit den Bohrungen auf die Gepäckplatte auflegen.

### Montage des Rastwinkels vorne auf der Gepäckplatte:

Der Rastwinkel wird mit Distanzhülsen  $\text{Ø}18 \times \text{Ø}9 \times 22\text{mm}$ , den Senkschrauben M6 x 40 und selbstsichernden Muttern M6 auf der Gepäckplatte vorne verschraubt.

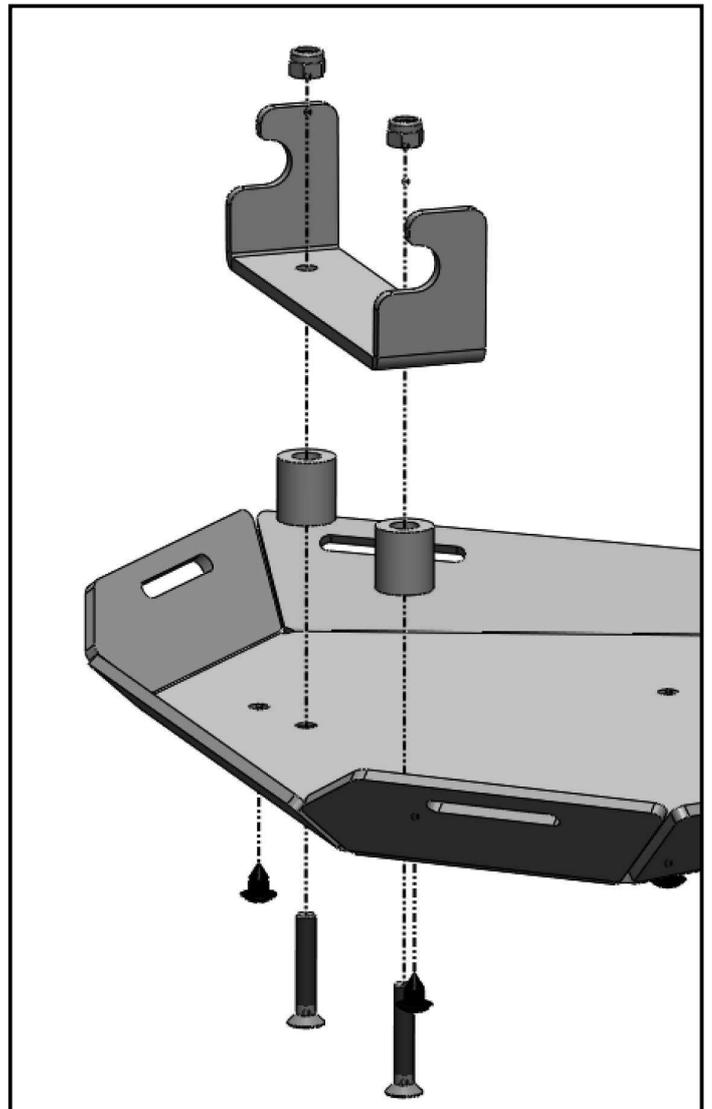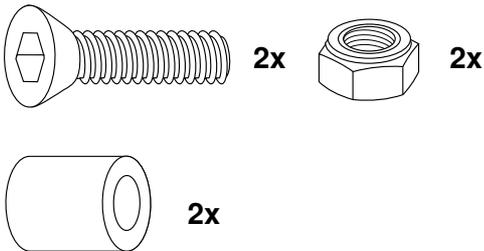

BMW S 1000 R

Art.-Nr.: 670.670 schwarz

## Montage


Montage des Schlosses hinten  
auf der Gepäckplatte:

Das Original - Schloss mit Halteplatte ① wird vorne auf dem Gummiträger verschraubt.



② Vorne die Distanzhülsen  $\text{Ø}17 \times \text{Ø}7 \times 6$  auflegen und mit den Senkschrauben M5 x 25 und selbstsichernden Mutter M5 verschrauben.



③ Mittig die Distanzhülsen  $\text{Ø}10 \times \text{Ø}6 \times 33$  auflegen und mit den Senkschrauben M5 x 50 mit selbstsichernden Mutter M5 verschrauben.



④ Hinten die Distanzhülse  $\text{Ø}13 \times \text{Ø}7 \times 7\text{mm}$  auflegen und mit einer Senkschraube M5 x 25 und einer selbstsichernden Mutter M5 befestigen.




Die 4 nicht benutzten Bohrungen mit Verschlußstopfen verschließen.

Die Befestigung des SPORTRACKS am Motorrad erfolgt in der gleichen Weise wie beim Soziussitz.

Bitte vor dem Fahren den festen Sitz des SPORTRACKS im Schloss kontrollieren.

Seitenkoffer  
Topcases  
Gepäckträger  
Lock it System  
Softbags  
Aluminiumkoffer  
Lederkoffer  
Schutzbügel  
Hauptständer  
Chopper-Parts  
Accessoires

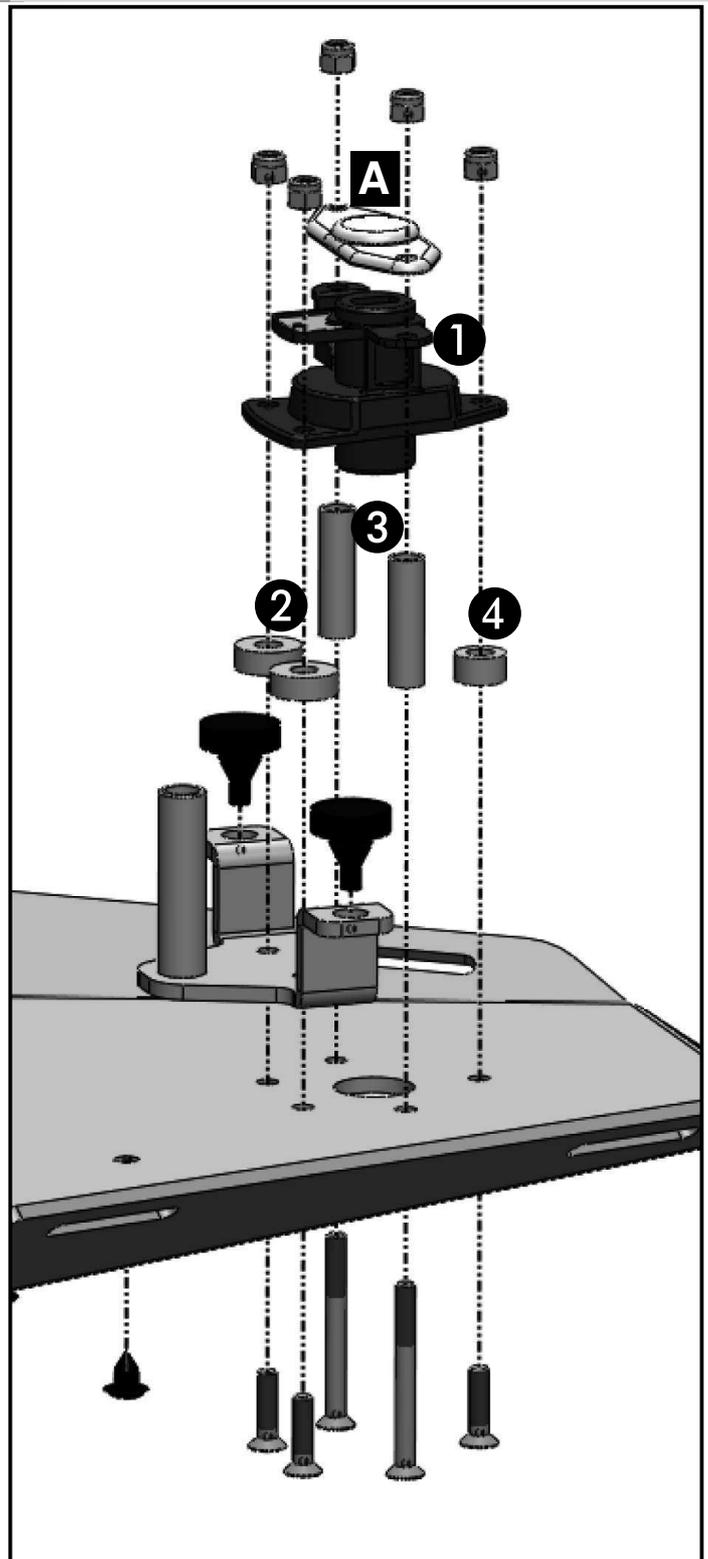


BMW S 1000 R

Art.-Nr.: 670.670 schwarz

## Montage

Anbringung des Dichtbandes:  
dieses wird, wie gezeigt, auf der Rückseite der  
Sportrackplatte aufgeklebt.

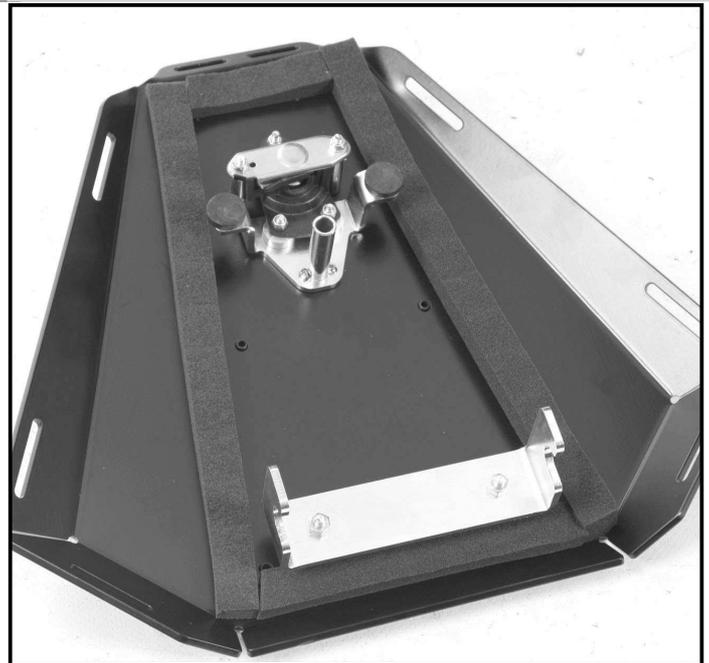

Seitenkoffer  
Topcases  
Gepäckträger  
Lock it System  
Softbags  
Aluminiumkoffer  
Lederkoffer  
Schutzbügel  
Hauptständer  
Chopper-Parts  
Accessoires



BMW S 1000 R

Item-no: 670.670 black

## Assembling instructions

The kit includes the following parts:

Quant	item no.	description
1	700008554	sportrack plate
1	700007452	rubber carrier
1	700007453	holding plate
2	151.331	countersunk screw M5 x 50
3	151.330	countersunk screw M5 x 25
2	151.169	countersunk screw M6 x 40
2	275.001	rubber Ø20 x 5,5mm
2	150.799	self lock nuts M6
5	270.111	self lock nuts M5
4	151.283	plastic plug Ø8 mm
2	151.109	alu spacer Ø17 x Ø 7 x 6 mm
2	151.319	steel spacer Ø10 x Ø 6 x 33 mm
1	150.728	alu spacer Ø13 x Ø 7 x 7 mm
2	150.705	alu spacer Ø18 x Ø 9 x 22 mm
1	151.356	Seal strip 20x40 94 cm
1	330.302	emblem ø30mm Hepco & Becker



Seitenkoffer  
Topcases  
Gepäckträger  
Lock it System  
Softbags  
Aluminiumkoffer  
Lederkoffer  
Schutzbügel  
Hauptständer  
Chopper-Parts  
Accessoires



### NOTICE:

The original lid of the pillion seat will be used.  
Therefore it is not possible to change the Sportrack with the Pillion seat again.  
If you do not want to dismantle the lid from the seat, a suitably coded lock is sold  
by your local BMW dealer.

Control all screw connections after the assembling for tightness!  
Please notice our enclosed service information.

Also available:

C-Bow holder for Softbags

Item-no. 630.670



**Hepco & Becker GmbH**  
An der Steinmauer 6  
D-66955 Pirmasens  
Germany

Tel.: 0049 6331 - 1453 - 100  
Fax: 0049 6331 - 1453 - 120  
eMail: [vertrieb@hepco-becker.de](mailto:vertrieb@hepco-becker.de)  
[www.hepco-becker.de](http://www.hepco-becker.de)

BMW S 1000 R

Item-no: 670.670 black

Seitenkoffer  
 Topcases  
 Gepäckträger  
 Lock it System  
 Softbags  
 Aluminiumkoffer  
 Lederkoffer  
 Schutzbügel  
 Hauptständer  
 Chopper-Parts  
 Accessoires



## Assembling instructions

### Preparing:

Dismantle pillion seat; dismantle the Original lid from the seat.

It is necessary, to bore the holes in the original lid cover to 5 mm diameter (refer to **A**, picture at page 3) to use the screws M5 x 50.



Mount rubbers to the rubber carrier.

Notice: to use both, the pillion seat or the Sportrack, another Original BMW lid is necessary. You can order this part from your BMW dealer.

### Fastening of the holding plate at the front of the sportrack plate:

sandwich spacer  $\varnothing 18 \times \varnothing 9 \times 22$  mm.

Fix the holding plate with countersunk head screws M6 x 40 and self lock nuts M6.

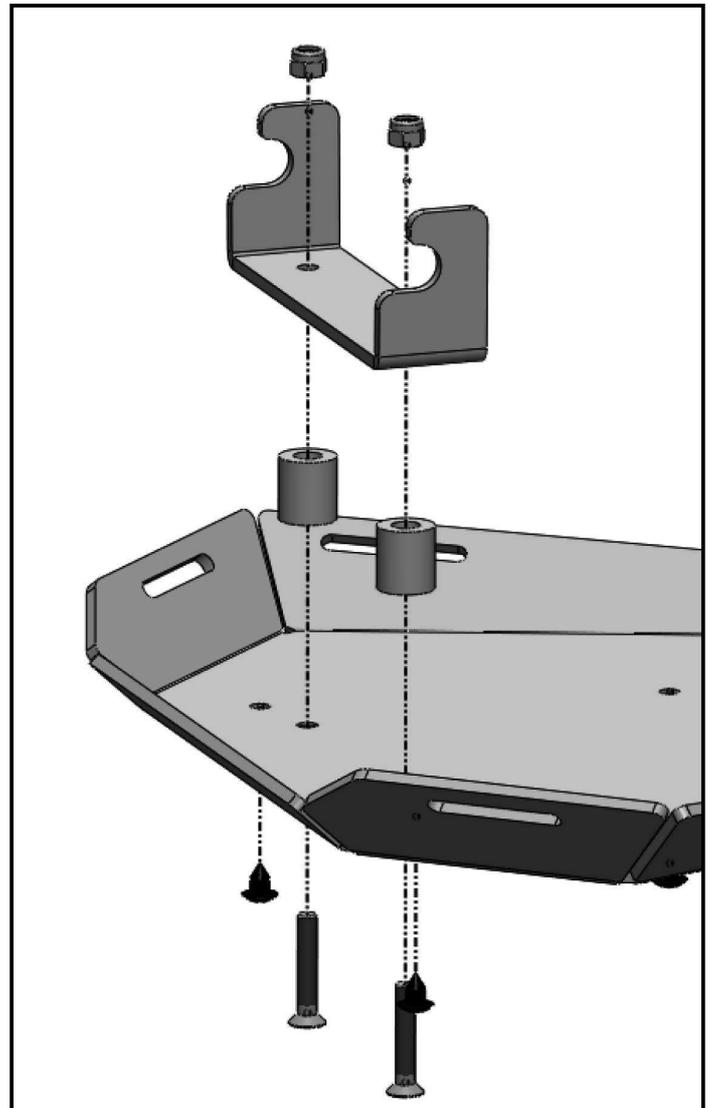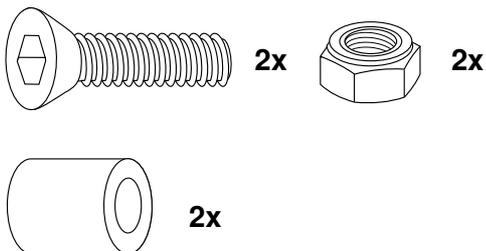

BMW S 1000 R

Item-no: 670.670 black




Seitenkoffer  
Topcases  
Gepäckträger  
Lock it System  
Softbags  
Aluminiumkoffer  
Lederkoffer  
Schutzbügel  
Hauptständer  
Chopper-Parts  
Accessoires

## Assembling instructions


Fastening of the lid at the rear side of the sportrack plate:

Fix the original lid ① with holding plate at the rubber carrier.


② Front: sandwich spacer  $\text{Ø}17 \times \text{Ø}7 \times 6\text{mm}$ .  
Fix the lid with countersunk head screws M5 x 25 and self lock nuts M5.



③ Middle: sandwich spacer  $\text{Ø}10 \times \text{Ø}6 \times 33\text{mm}$ .  
Fix the lid with countersunk head screws M5 x 50 and self lock nuts M5.




④ Rear: sandwich spacer  $\text{Ø}13 \times \text{Ø}7 \times 7\text{mm}$ .  
Fix the lid with countersunk head screws M5 x 20 and self lock nuts M5.



Put the plastic plugs into the free borings.

Before driving, control the correct and locked position of the SPORTRACK in the lid of the pillion seat !

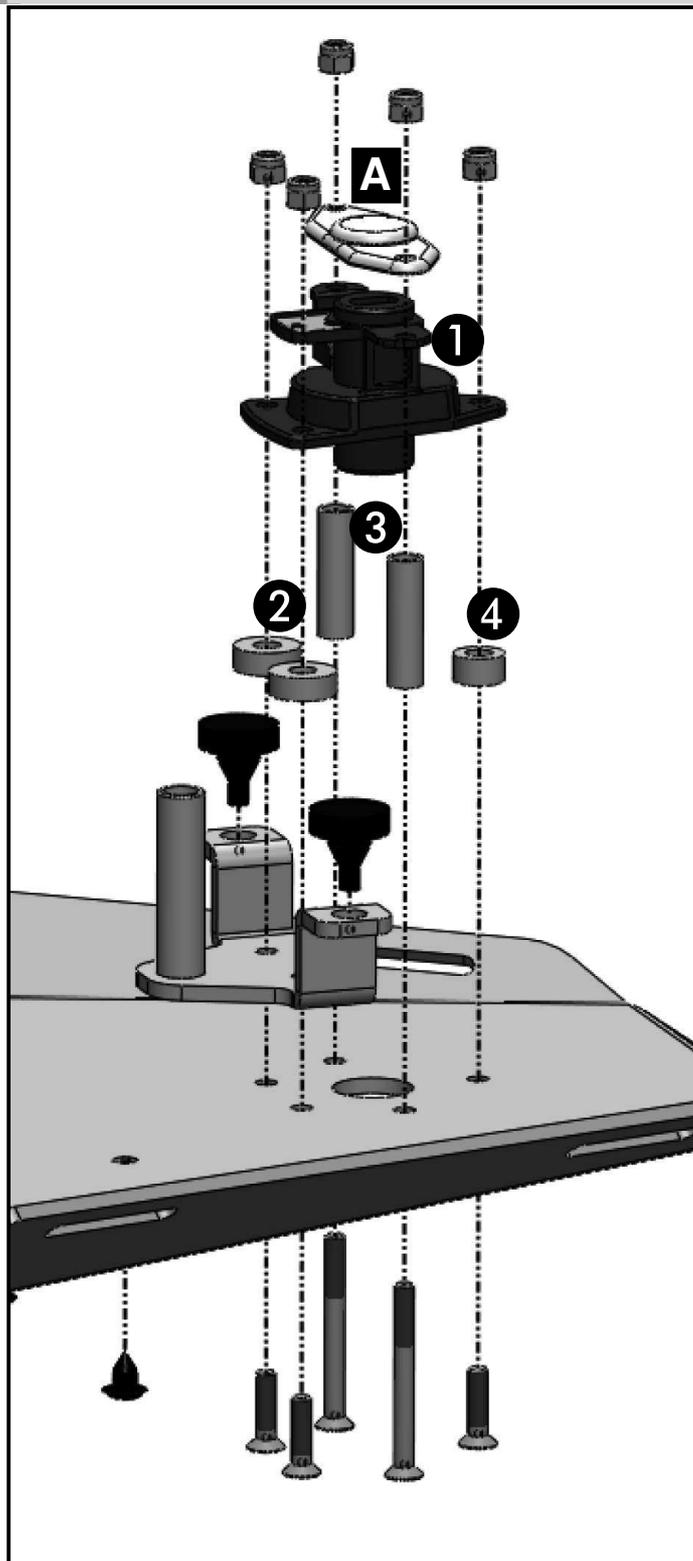

BMW S 1000 R

Item-no: 670.670 black

## Assembling instructions

Affixing of the seal strip:  
this will be stuck, as shown on the picture, to the back of the Sportrack plate.

Seitenkoffer  
Topcases  
Gepäckträger  
Lock it System  
Softbags  
Aluminiumkoffer  
Lederkoffer  
Schutzbügel  
Hauptständer  
Chopper-Parts  
Accessoires

