

PORTAVALIGIA SPECIFICO - SPECIFIC CASE HOLDER
 PORTE-VALISE SPECIFIQUE - SPEZIFISCHER KOFFER-TRÄGER
 PORTA-EQUIPAJE ESPECIFICO

YAMAHA T-MAX 500 01/02

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE




FORARE FINO AD UN DIAMETRO DI 14mm
 NEI PUNTI INDICATI SUL RETRO

DRILL IT IN THE POINTS SHOWN
 BEHIND IT TO A
 DIAMETER OF 14mm


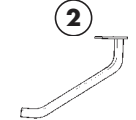


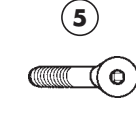
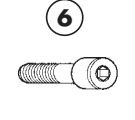








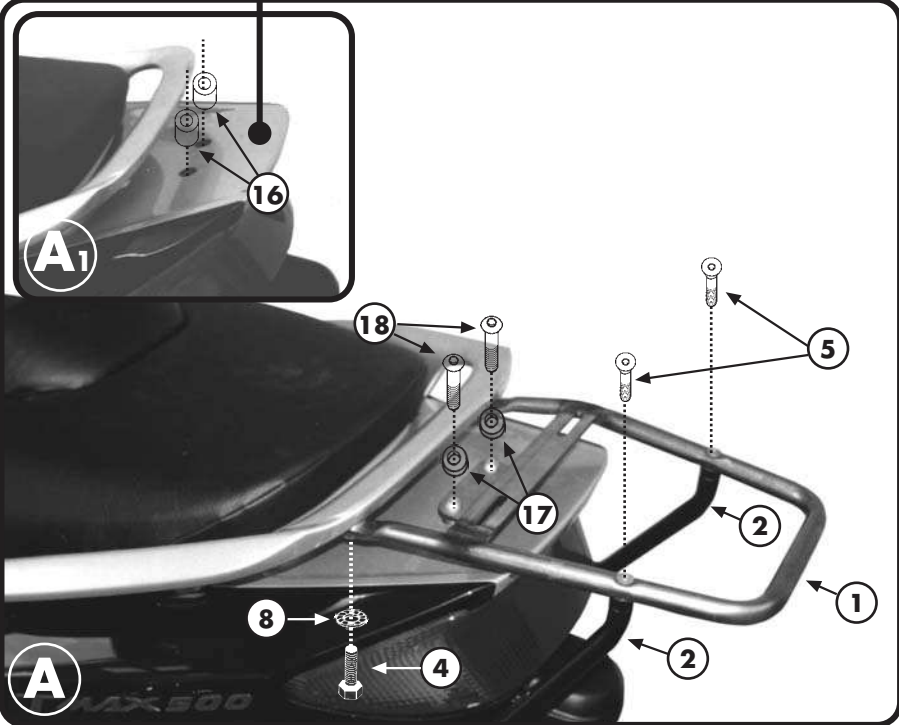



IL FAUT LE PERCER JUSQU'À OBTENIR
 UN DIAMÈTRE DE 14mm AUX POINTS
 INDIQUÉS AU VERSO


bohren SIE die drei Punkte auf der
 Rückseite*IN EINEN DURCHMESSER von
 14mm

FORARLO HASTA UN DIAMETRO DE 14mm
 EN LOS PUNTOS INDICADOS DETRAS



A

<p>1</p>  <p>PORTAPACCHI LUGGAGE CARRIER PORTE-PAQUETS TRÄGER PORTAEQUIPAJE</p> <p>Q.TY n.1</p>	<p>2</p>  <p>SOPORTI LATERALI SIDE SUPPORT PÂTTES LATÉRALES LAGER SOPORTES LATERALES</p> <p>Q.TY n.2 (dx-sx)</p>	<p>3</p>  <p>VITE TE M6x25 nera SCREW M6x25 black VIS M6x25 noire SCHRAUBE M6x25 schwarz TORNILLO M6x25 negro</p> <p>Q.TY n.2</p>	<p>4</p>  <p>VITE TE M8x20 SCREW M8x20 VIS M8x20 SCHRAUBE M8x20 TORNILLO M8x20</p> <p>Q.TY n.2</p>	<p>5</p>  <p>VITE TSCEI M6x30 SCREW M6x30 VIS M6x30 SCHRAUBE M6x30 TORNILLO M6x30</p> <p>Q.TY n.2</p>	<p>6</p>  <p>VITE TCEI M6x25 SCREW M6x25 VIS M6x25 SCHRAUBE M6x25 TORNILLO M6x25</p> <p>Q.TY n.2</p>
<p>7</p>  <p>VITE TCEI M6x35 SCREW M6x35 VIS M6x35 SCHRAUBE M6x35 TORNILLO M6x35</p> <p>Q.TY n.2</p>	<p>8</p>  <p>RONDELLA ZIGRINATA Ø8 WASHER f8 RONDELLE f8 SCHEIBE f8 ARANDELA f8</p> <p>Q.TY n.2</p>	<p>9</p>  <p>RONDELLA Ø6 WASHER f6 RONDELLE f6 SCHEIBE f6 ARANDELA f6</p> <p>Q.TY n.8</p>	<p>10</p>  <p>DADO A.B. M6 NERO BOLT M6 BLACK ECROU M6 NOIR MUTTER M6 SCHWARTZ TUERCA M6 NEGRO</p> <p>Q.TY n.4</p>	<p>11</p>  <p>PIASTRA Z622 PLATE Z622 PLATINE Z622 PLATTE Z622 PLETINA Z622</p> <p>Q.TY n.1</p>	<p>12</p>  <p>DISTANZIALE ORIG. ORIGINAL SPACER ENTRETOISE ORIGINAL ORIGINAL DISTANZSTÜCK DISTANCIADOR ORIGINAL</p> <p>Q.TY n.-</p>
<p>13</p>  <p>Z621</p> <p>COPRIFORO BOLT CAP CACHE TROU STOPLOCK TAPA AGUJERO</p> <p>Q.TY n.6</p>	<p>14</p>  <p>GOMMINO Z126 RUBBER Z126 CAOUTCHOUC Z126 GUMMI Z126 GOMA Z126</p> <p>Q.TY n.4</p>	<p>15</p>  <p>RONDELLA Ø6x18 nera WASHER f6x18 black RONDELLE f6x18 noire SCHEIBE f6x18 schwarz ARANDELA f6x18 negra</p> <p>Q.TY n.2</p>	<p>16</p>  <p>DISTANZIALE Ø14x22 foro Ø8,5mm SPACER ENTRETOISE DISTANZSTUECK DISTANCIADOR</p> <p>Q.TY n.2</p>	<p>17</p>  <p>RONDELLA Ø8x14 WASHER f8x14 RONDELLE f8x14 SCHEIBE f8x14 ARANDELA f8x14</p> <p>Q.TY n.2</p>	<p>18</p>  <p>VITE TBEI M8x40 SCREW M8x40 VIS M8x40 SCHRAUBE M8x40 TORNILLO M8x40</p> <p>Q.TY n.2</p>

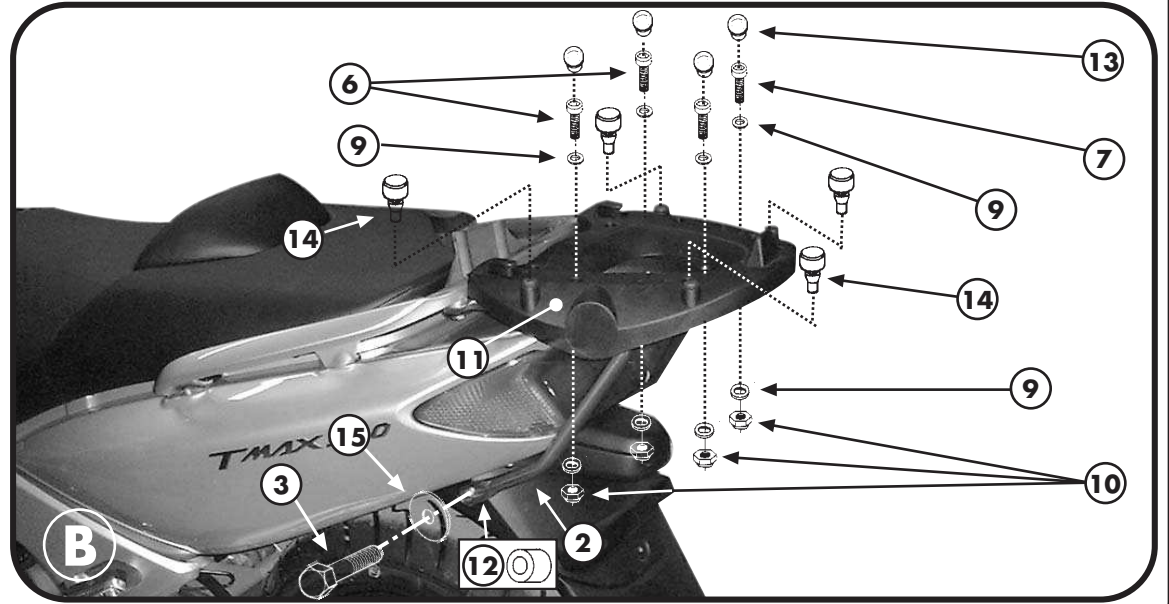

B