



**ATTACCHI UNIVERSALI PER MOTO**  
**UNIVERSAL FITTING KIT FOR MOTORCYCLE**  
**KIT DE MONTAGE UNIVERSEL POUR MOTO**  
**UNIVERSAL HALTERUNGEN FÜR MOTORRADER**  
**ANCLAJE UNIVERSAL PARA MOTO**

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG  
 INSTRUCCIONES DE MONTAJE

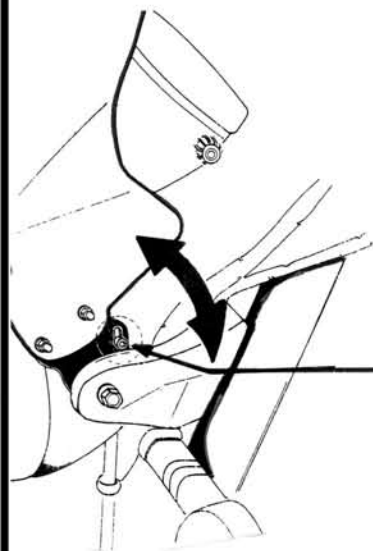

- VITE BLOCCAGGIO INCLINAZIONE
- INCLINATION BLOCKING SCREW
- VIS POUR LE BLOCAGE DE L'INCLINAISON
- SCHRAUBE ZUR EINSTELLUNG DES NEIGUNGSWINKELS

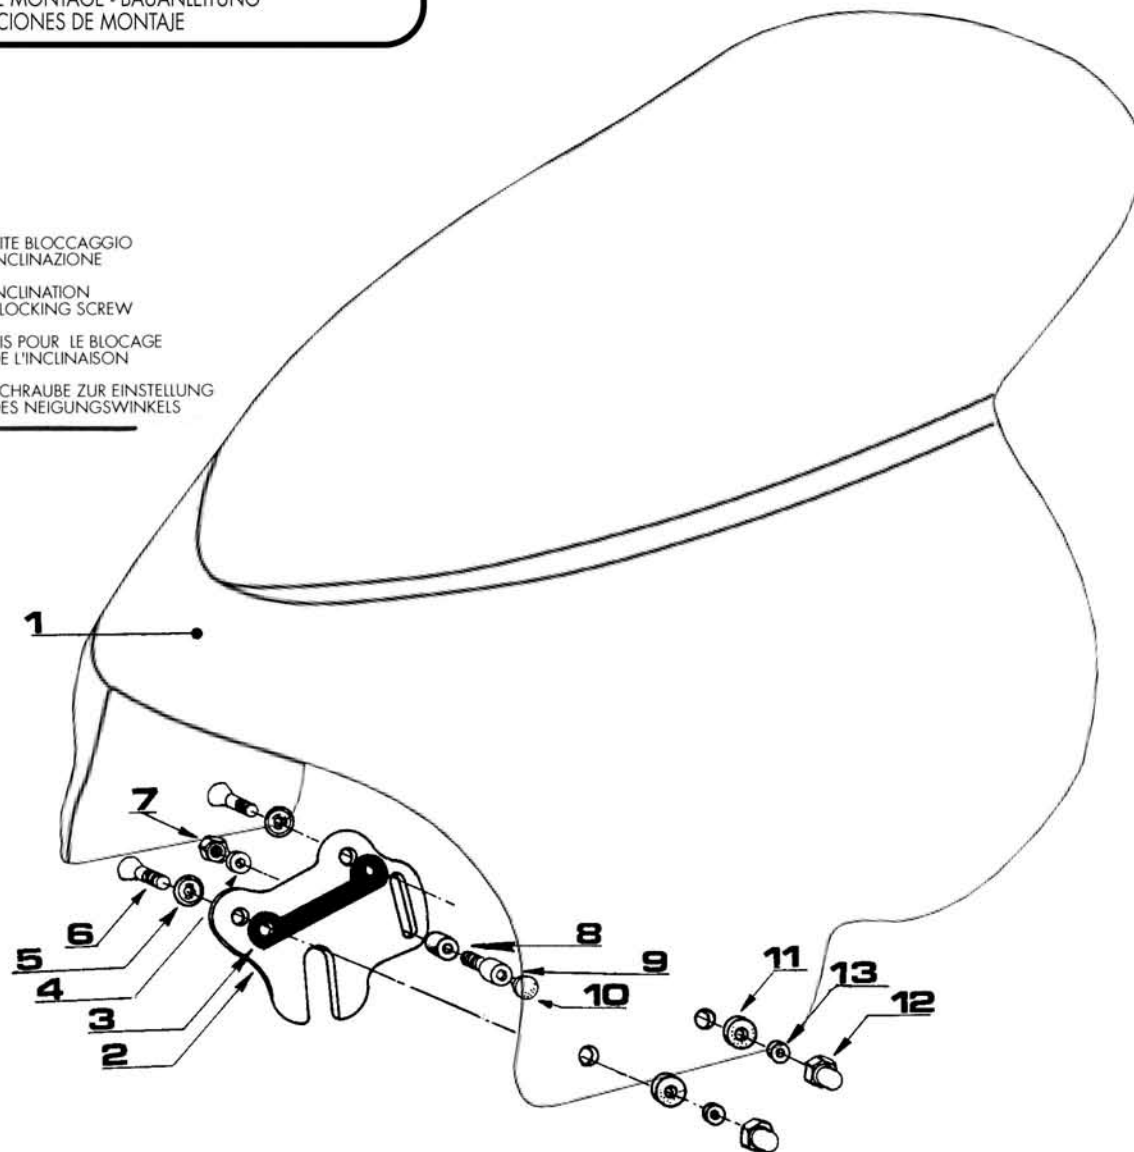

N°	DESCRIZIONE DEL KIT (KIT DESCRIPTION) (DESCRIPTION DU KIT) (BESCHREIBUNG DES BEFESTIGUNGSKITS)	QUANTITA' (QUANTITY) (QUANTITE)
1	<b>AIRSTARS</b> AIRSTAR PARE-BRISE AIRSTARS	—
2	<b>PIASTRINA INOX (1dx 1 sx)</b> INOX PLATE PLATINE EN INOX EDELSTAHLPLATTE	2
3	<b>GOMMA</b> RUBBER CAOUTCHOUC GUMMI	2
4	<b>RONDELLA Ø 6 IN INOX</b> WASHER Ø 6 RONDELLE Ø 6 UNTERLEGSCHEIBE	2
5	<b>RONDELLA SPECIALE INOX</b> SPECIAL WASHER RONDELLE SPECIALE SPEZIAL-UNTERLEGSCHEIBE	4
6	<b>VITE TPSCEI M 6 X 18 INOX</b> SCREW M 6 X 18 VIS M 6 X 18	4
7	<b>DADO M 6 AUTOBLOC. RIBAS. inox</b> NUT M 6 ECROU M 6 SCHRAUBENMUTTER	2
8	<b>BUSSOLA INOX Ø 13 X 8</b> AXLE BOX Ø 13 X 8 RONDELLE SPECIALE DE SEPARATION Ø 13 X 8 EDELSTAHLBUCHSE Ø 13 X 8	2
9	<b>VITE TCEI M 6 X 10 INOX</b> SCREW M 6 X 10 VIS M 6 X 10 SCHRAUBE M 6 X 10	2
10	<b>TAPPO COPRIVITE NERO</b> COVER SCREW CAP BOUCHON COUVRE VIS SCHRAUBENSTOPSEL	2
11	<b>RONDELLA IN GOMMA Ø16 FORO 6</b> RUBBER WASHER Ø 16 RONDELLE EN CAOUTCHOUC GUMMIUNTERLEGSCHEIBE	4
12	<b>DADO M6 CIECO INOX</b> BLIND NUT M 6 NUT AVEUGLE M 6 BLINDMUTTER	4
13	<b>RONDELLA Ø6x16 IN INOX</b> WASHER RONDELLE UNTERLEGSCHEIBE	4