


PARAMOTORE SPECIFICO - SPECIFIC ENGINE GUARD - PARE-CARTER SPECIFIQUE
 SPEZIFISCHES STURZBUEGEL - PROTEGEMOTOR ESPECIFICO

HONDA XRV 750 AfricaTwin

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

LATO SINISTRO
 LEFT SIDE
 COTE GAUCHE

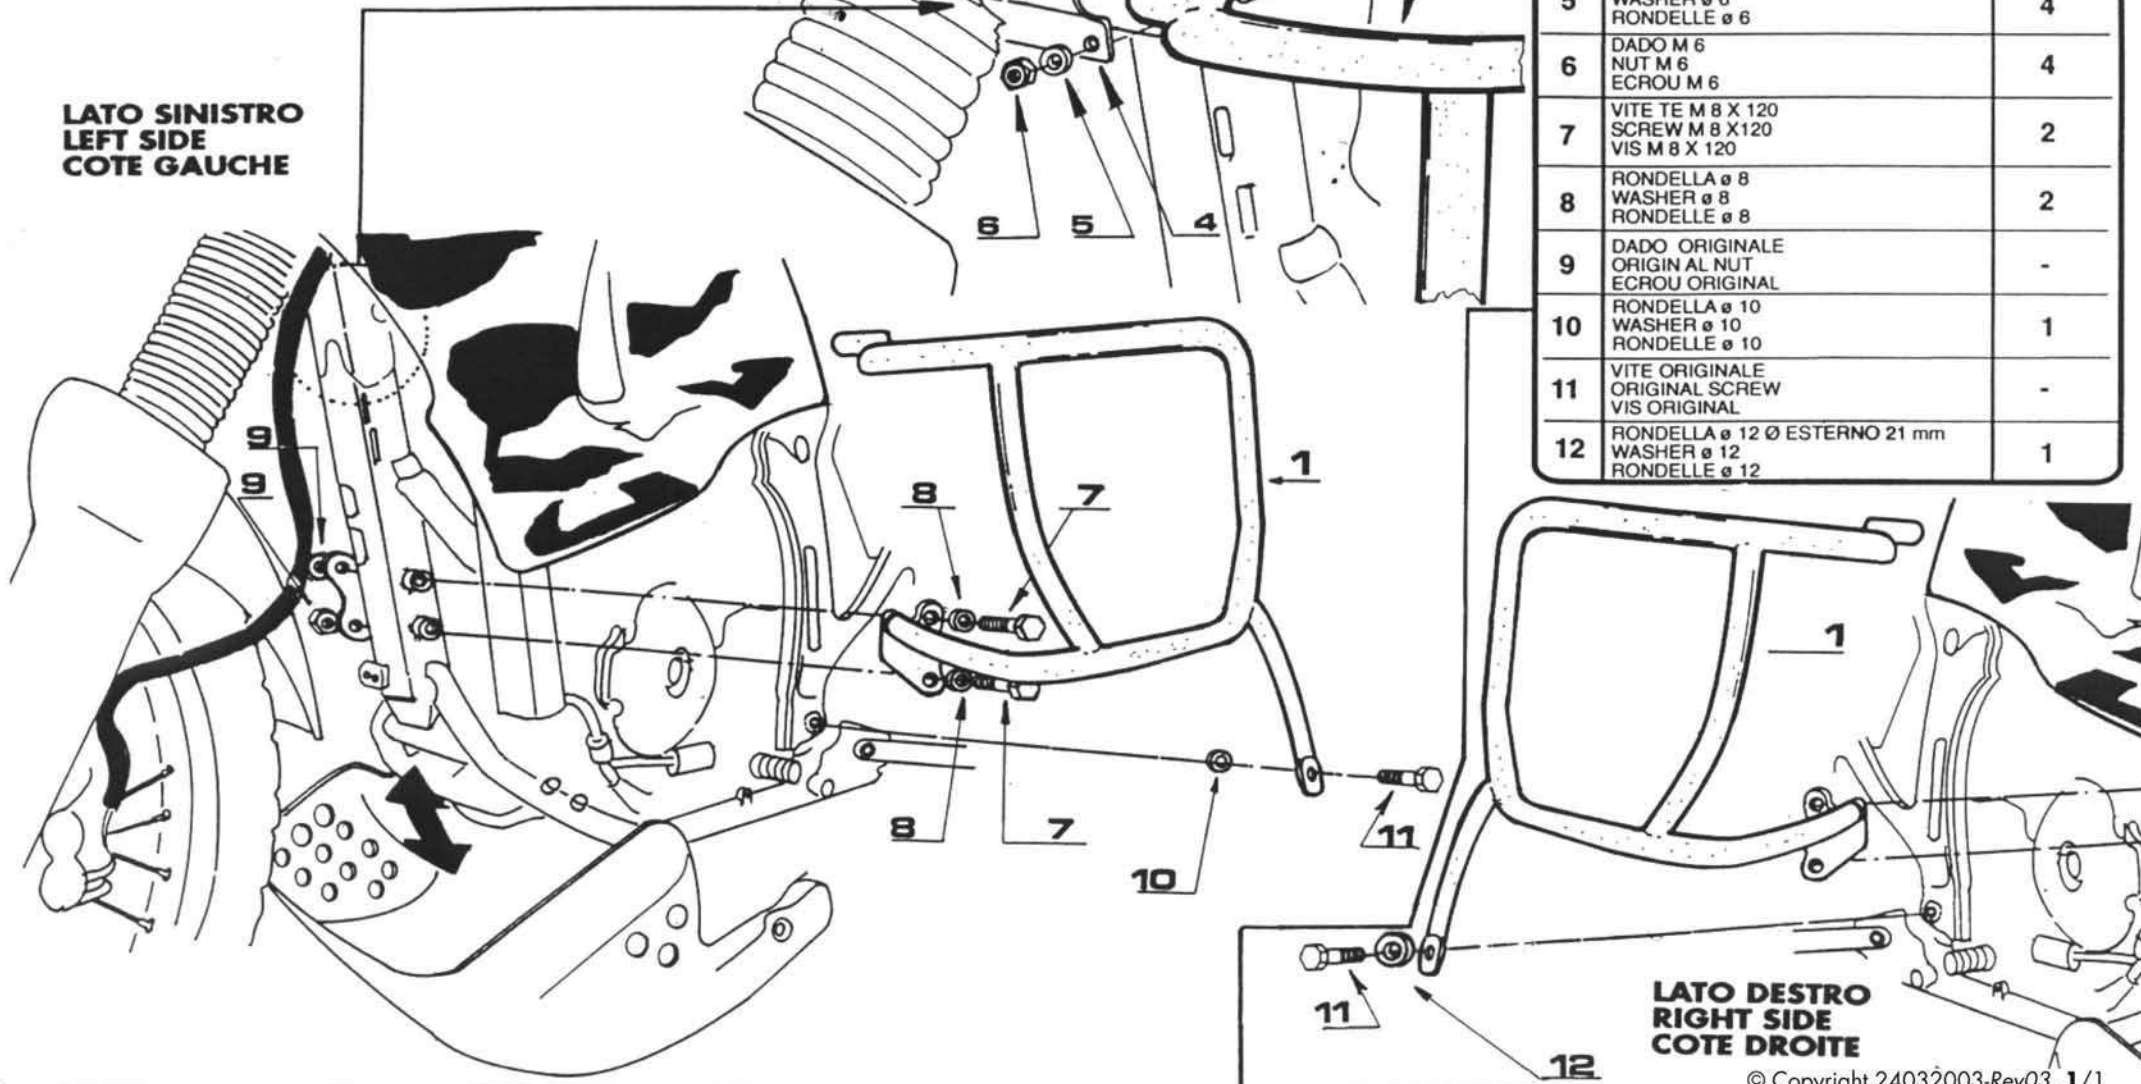

| N° | DESCRIZIONE DEL KIT (KIT DESCRIPTION) (DESCRIPTION DU KIT) | QUANTITA' (QUANTITY) (QUANTITE) |
|----|--|---------------------------------------|
| 1 | PARAMOTORE ENGINE GARD PARACARTER | 2 |
| 2 | CAVALLOTTO SPECIALE SPECIAL CRAMP CRAMPON SPECIAL | 2 |
| 3 | SUPPORTO SUPPORT SUPPORT | 1 |
| 4 | SUPPORTO SUPPORT SUPPORT | 1 |
| 5 | RONDELLA ø 6 WASHER ø 6 RONDELLE ø 6 | 4 |
| 6 | DADO M 6 NUT M 6 ECROU M 6 | 4 |
| 7 | VITE TE M 8 X 120 SCREW M 8 X 120 VIS M 8 X 120 | 2 |
| 8 | RONDELLA ø 8 WASHER ø 8 RONDELLE ø 8 | 2 |
| 9 | DADO ORIGINALE ORIGINAL NUT ECROU ORIGINAL | - |
| 10 | RONDELLA ø 10 WASHER ø 10 RONDELLE ø 10 | 1 |
| 11 | VITE ORIGINALE ORIGINAL SCREW VIS ORIGINAL | - |
| 12 | RONDELLA ø 12 Ø ESTERNO 21 mm WASHER ø 12 RONDELLE ø 12 | 1 |

LATO DESTRO
 RIGHT SIDE
 COTE DROITE