
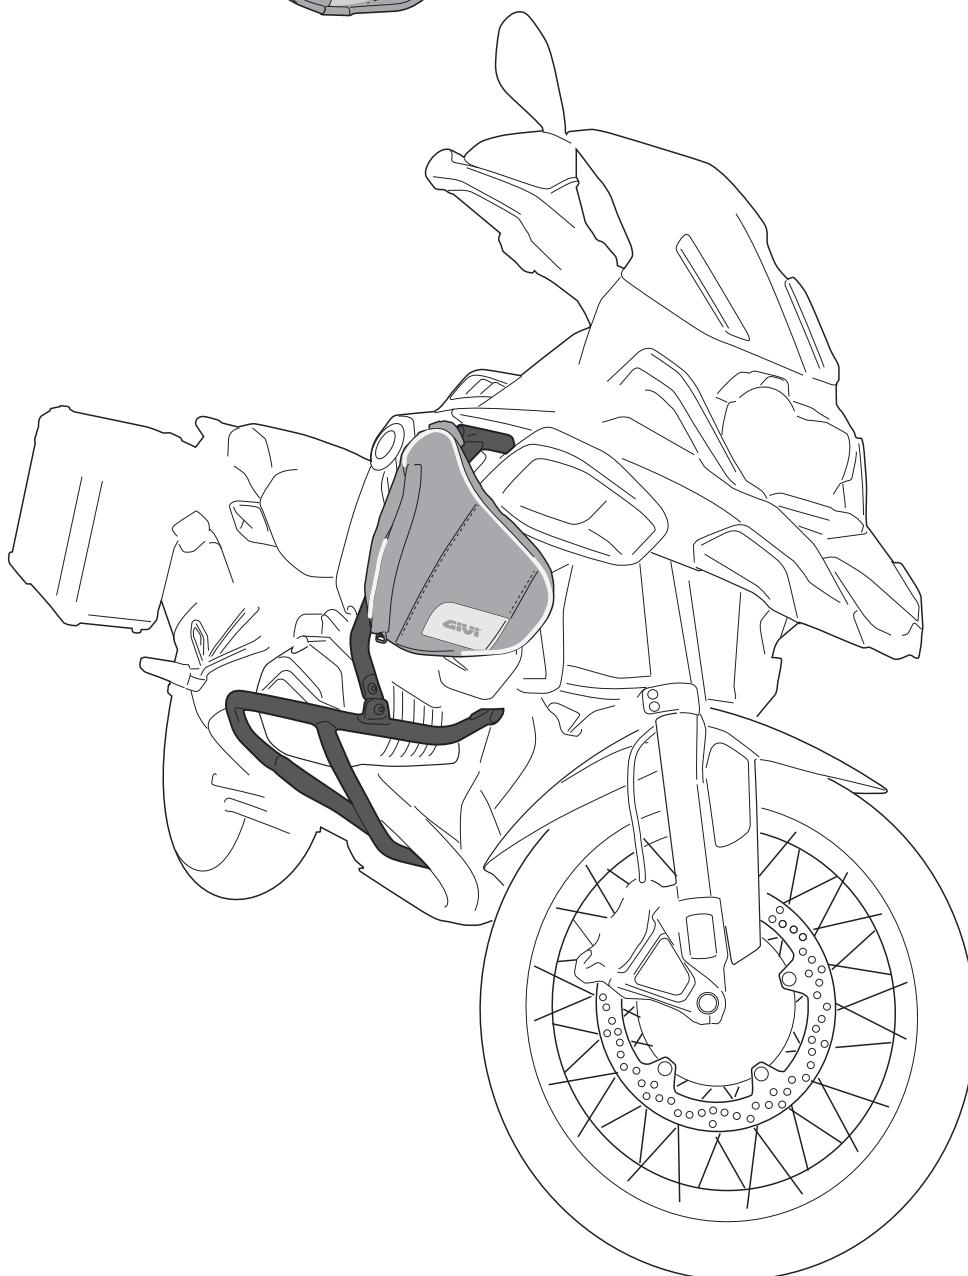


XS5112E

COPPIA DI BORSE XSTREAM SPECIFICHE DA MONTARE SUL PARAMOTORE ORIGINALE - PAIR OF XSTREAM PANNIERS TO BE MOUNTED ON THE ORIGINAL ENGINE GUARD
PAIRE DE VALISES XSTREAM, CONÇUE POUR ÊTRE MONTÉE SUR LE CÔTÉ DU MOTEUR - PAAR SPEZIFISCHE XSTREAM TASCHEN ZUR BEFESTIGUNG AN DEN ORIGINALEN STURZBÜGELN

ALFORJAS XSTREAM ESPECÍFICAS PARA COLOCAR SOBRE EL PARAMOTOR ORIGINAL

BMW R1200GS ADVENTURE (2014)

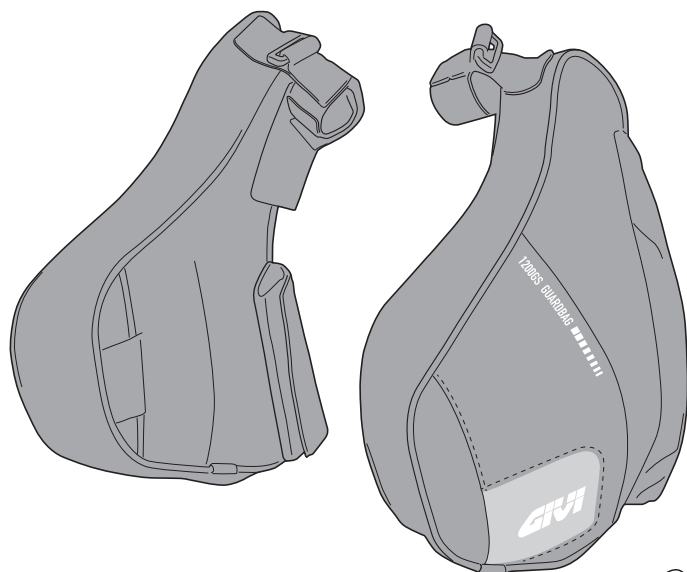





ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG
INSTRUCCIONES DE MONTAJE - INSTRUÇÕES DE MONTAGEM

XS5112E

COPPIA DI BORSE XSTREAM SPECIFICHE DA MONTARE SUL PARAMOTORE ORIGINALE - PAIR OF XSTREAM PANNIERS TO BE MOUNTED ON THE ORIGINAL ENGINE GUARD
PAIRE DE VALISES XSTREAM, CONÇUE POUR ÊTRE MONTÉE SUR LE CÔTÉ DU MOTEUR - PAAR SPEZIFISCHE XSTREAM TASCHEN ZUR BEFESTIGUNG AN DEN ORIGINALEN STURZBÜGELN

ALFORJAS XSTREAM ESPECÍFICAS PARA COLOCAR SOBRE EL PARAMOTOR ORIGINAL

BMW R1200GS ADVENTURE (2014)

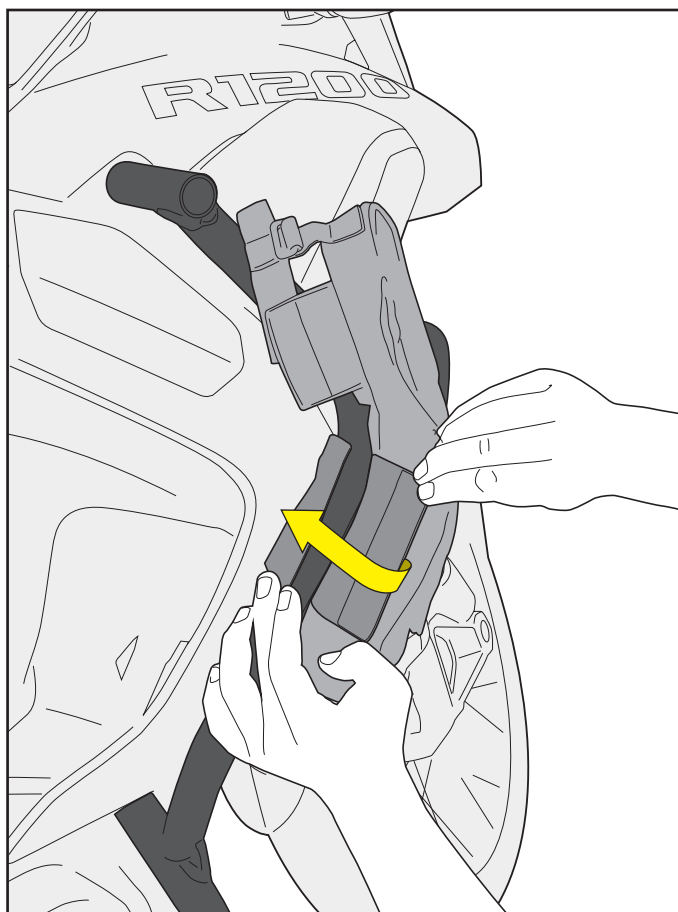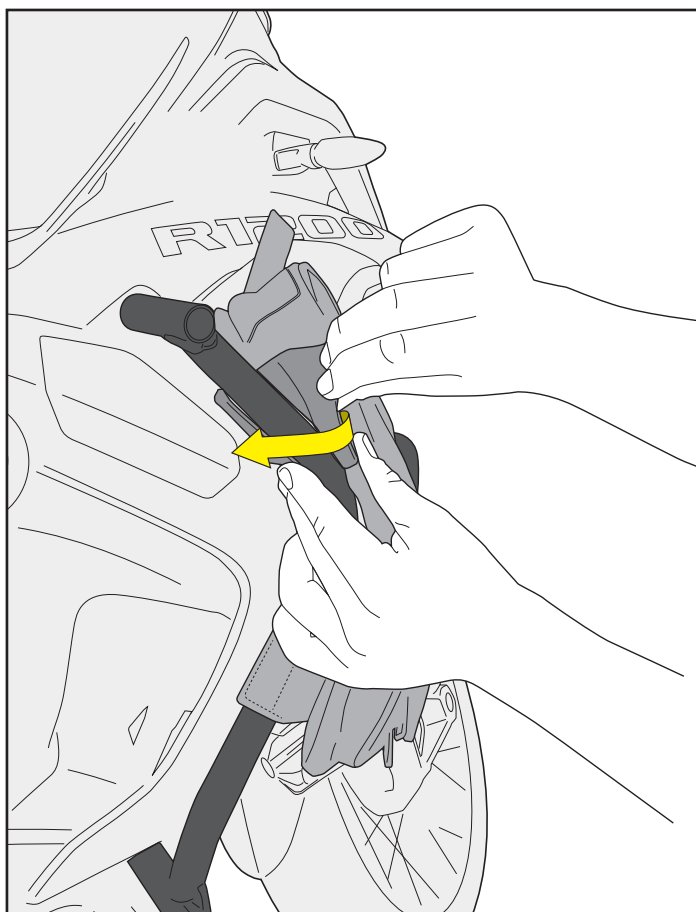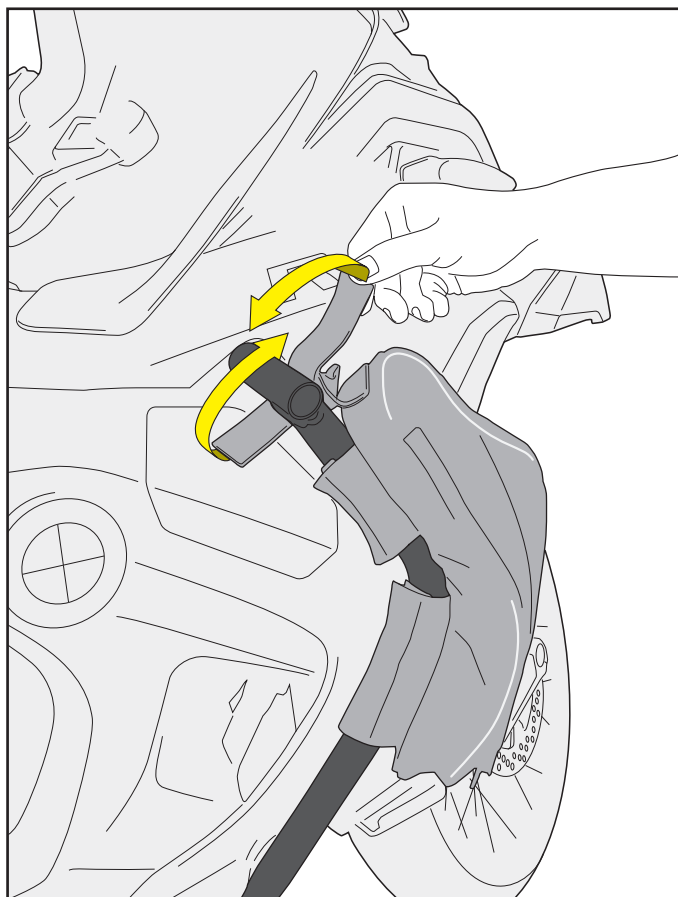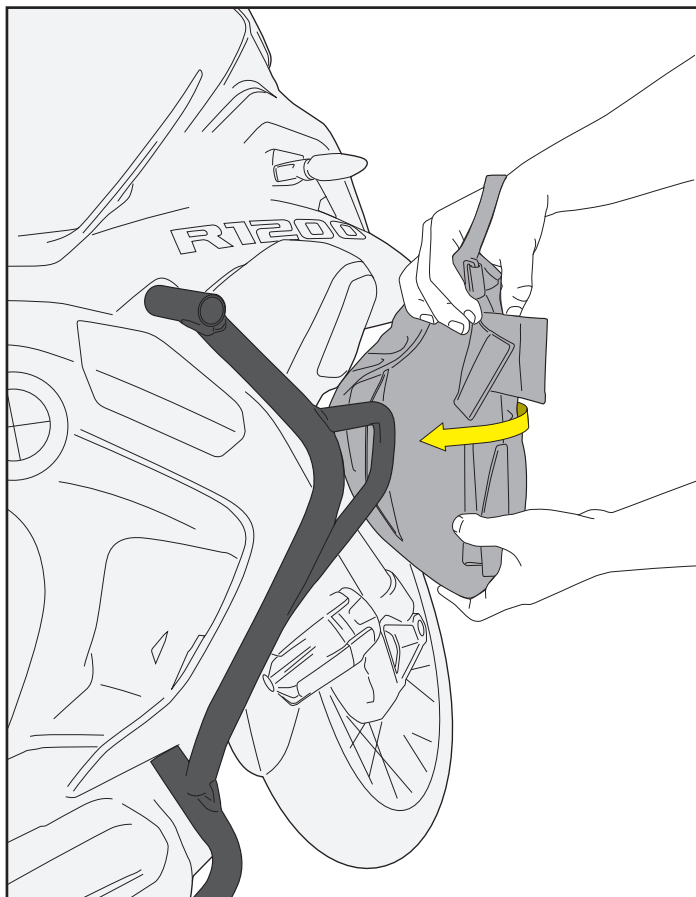

XS5112E

COPPIA DI BORSE XSTREAM SPECIFICHE DA MONTARE SUL PARAMOTORE ORIGINALE - PAIR OF XSTREAM PANNIERS TO BE MOUNTED ON THE ORIGINAL ENGINE GUARD
PAIRE DE VALISES XSTREAM, CONÇUE POUR ÊTRE MONTÉE SUR LE CÔTÉ DU MOTEUR - PAAR SPEZIFISCHE XSTREAM TASCHEN ZUR BEFESTIGUNG AN DEN ORIGINALEN STURZBÜGELN

ALFORJAS XSTREAM ESPECÍFICAS PARA COLOCAR SOBRE EL PARAMOTOR ORIGINAL

BMW R1200GS ADVENTURE (2014)

