

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR  
 KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR  
 ANCLAJE ESPECIFICO PARA

# HONDA HORNET 600 2007

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
 INSTRUCCIONES DE MONTAJE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

1




**Q.TY n.1**

2

**SUPPORTO**  
 SUPPORT  
 SUPPORT  
 HALTERUNG  
 SOPORTE

**Q.TY n.2(Dx-Sx)**

3



**VITE TEF M8x30mm**  
 SCREW M8x30mm  
 VIS M8x30mm  
 SCHRAUBE M8x30mm  
 TORNILLO M8x30mm

**Q.TY n.2**


4



**DISTANZIALE Ø18x10mm  
 foro Ø8,5mm V**  
 SPACER  
 ENTRETOISE  
 DISTANZSTUECK  
 DISTANCIADOR

**Q.TY n. 2**

5



**RONDELLA SVASATA Ø6mm  
 200RON**  
 WASHER Ø6mm  
 RONDELLE Ø6mm  
 SCHEIBE Ø6mm  
 ARANDELA VACIADA Ø6mm

**Q.TY n.4**

6



**RONDELLA IN GOMMA**  
 ORONG  
 RUBBER WASHER  
 RONDELLE EN CAOUTCHOUC  
 GUMMI SCHEIBE  
 ARANDELA DE GOMA


**Q.TY n.8**

7



**VITE TSCEI INOX  
 M6x16mm**  
 SCREW M6x16mm  
 VIS M6x16mm  
 SCHRAUBE M6x16mm  
 TORNILLO M6x16mm

**Q.TY n.4**

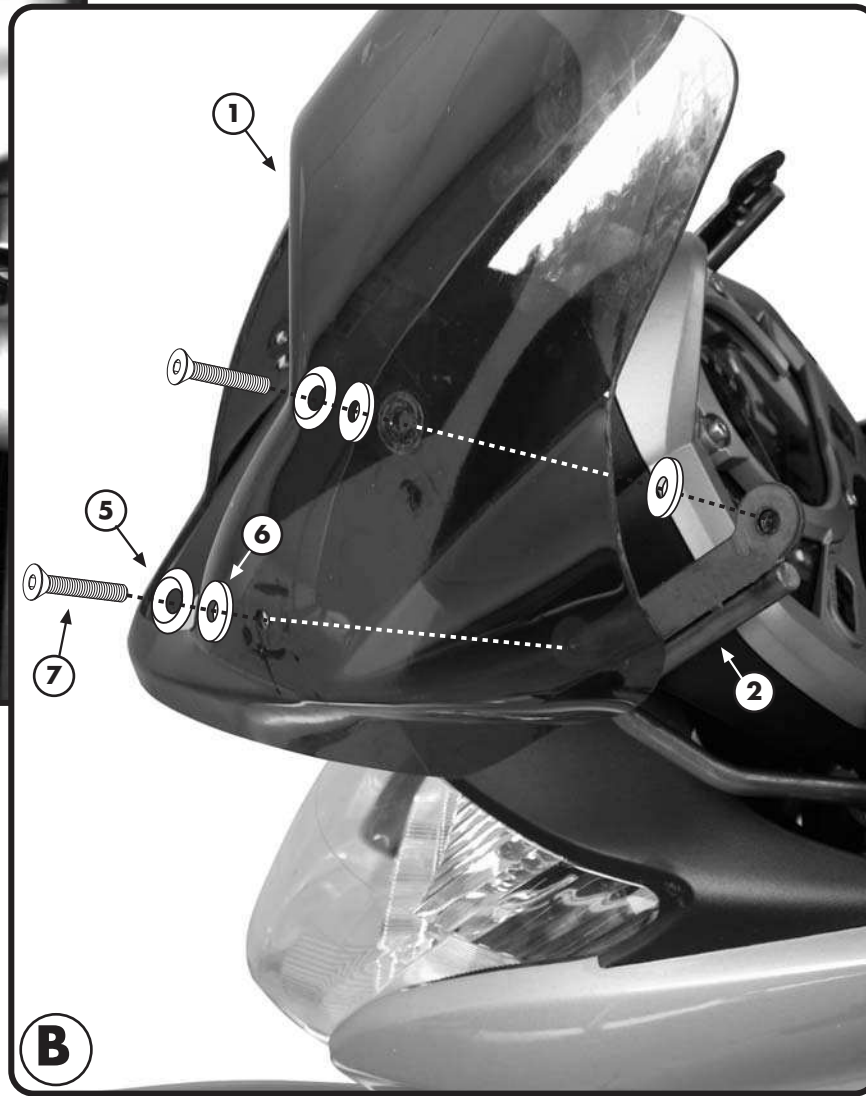

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR  
KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR  
ANCLAJE ESPECÍFICO PARA

# HONDA HORNET 600 2007

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

## I ISTRUZIONI DI MONTAGGIO

- MONTARE I SUPPORTI "2" COME INDICATO IN FIGURA "A".  
POSIZIONARE IL CUPOLINO "1" E SEGUIRE IL MONTAGGIO PROPOSTO IN FIGURA "B".  
CONTROLLARE CHE TUTTE LE VITI SIANO SERRATE BENE.

## GB MOUNTING INSTRUCTIONS

1. MOUNT THE SUPPORTS N° 2 BY FIXING THEM TO THE FORKS BENEATH THE HANDLEBAR AS SHOWN IN PICTURE A;
2. PLACE THE WINDSCREEN N° 1 AND CARRY OUT THE MOUNTING SUGGESTED IN PICTURE B;
3. LASTLY CHECK THAT ALL SCREWS HAVE BEEN TIGHTENED.

## F INSTRUCTIONS DE MONTAGE

1. MONTER LES SUPPORTS "2" EN LES FIXANT AU DESSOUS DU GUIDON DE CHAQUE COTE DES TUBES DE FOURCHE COMME INDIQUE EN PHOTO «A».
2. POSITIONNER LE PARE-BRISE «1» ET EXECUTER LE MONTAGE PROPOSE EN PHOTO «B».
3. TERMINER LE MONTAGE EN CONTROLANT LE BON SERRAGE DE TOUTES LES VIS.

## D BAUANLEITUNG

1. MONTIEREN SIE DIE HALTERUNGEN NR. 2 BEFESTIGEN SIE DIESE AN DER LENKERGABEL WIE IM BILD A BESCHRIEBEN;
2. POSITIONIEREN SIE DAS WINDSCHILD NR. 1 UND FÜHREN SIE DIE MONTAGE VOM BILD B DURCH;
3. ZULETZT ÜBERPRÜFEN SIE, DASS ALLE SCHRAUBEN FESTGEZOGEN WURDEN.

## ES

## INSTRUCCIONES DE MONTAJE

1. MONTAR LOS SOPORTES "2" FIJANDOLOS DEBAJO DEL MANUBRIO AL LADO DE LAS HORQUILLAS COMO MOSTRADO EN FOTOGRAFIA A
2. POSICIONAR LA CUPOLA "1" Y SEGUIR EL MONTAJE PROPUUESTO EN FOTOGRAFIA B
3. CONTROLAR QUE TODOS LOS TORNILLOS SE ENCUENTREN BIEN AJUSTADOS