
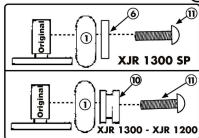


MONORACK SPECIFICO - SPECIFIC MONORACK
 MONORACK SPECIFIQUE - SPECIFISCHES MONORACK - MONORACK ESPECIFICO

YAMAHA XJR 1200 '95/'98
YAMAHA XJR 1300 '99/'00

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANEITUNG - INSTRUCCIONES DE MONTAJE

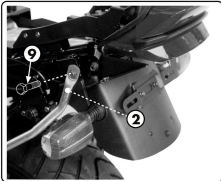

1



MONORACK
 Q.TY n.2 Da/De

2



GAMBA POSTERIORE
 REAR SUPPORT
 SUPPORT POSTERIEURE
 LAGER
 SOPORTE TRASERO
 Q.TY n.2 Da/De

3



RONDELLA 6 X 18
 WASHER 6 X 18
 RONDELE 6 X 18
 ARANDELA 6 X 18
 Q.TY n.2

4



VITE T881 M6 X 55
 SCREW M6 X 55
 VIS M6 X 55
 TORNEILLO M6 X 55
 Q.TY n.2

5



VITE TCE1 M 6 X 55
 SCREW M 6 X 55
 VIS M 6 X 55
 SCHRAUBE M 6 X 55
 TORNEILLO M 6 X 55
 Q.TY n.2

6



RONDELLA ø 8 X 14
 WASHER ø 8 X 14
 RONDELE ø 8 X 14
 ARANDELA ø 8 X 14
 Q.TY n.2

7



TAPPO COPRIVITE
 COVER SCREW CAP
 CÂCHE VIS
 SCHRAUBE STOPFEL
 TAPILLOS TORNILLOS
 Q.TY n.2

8



DADO SPECIALE 14X6
 (RHS - 8x3)
 SPECIAL BOLT
 (ECCOLI) SPECIAL
 SPECIAL WALTER
 TUBERCA ESPECIAL
 Q.TY n.2

9



VITE ORIGINALE
 ORIGINAL SCREW
 VIS D'ORIGINE
 ORIGINAL SCHRAUBE
 TORNEILLO ORIGINAL
 Q.TY n.-

10



DISTANZIALE ORIGINALE
 ORIGINAL SPACER
 ENTRETREUSE ORIGINAL
 ORIGINAL TÜRSTÜTZLÖCK
 DISTANCIADOR ORIGIN.
 Q.TY n.-

11



VITE ORIGINALE
 ORIGINAL SCREW
 VIS D'ORIGINE
 ORIGINAL SCHRAUBE
 TORNEILLO ORIGINAL
 Q.TY n.-

WARNING!
 -TOGLIERE I GANCI ORIGINALI
 -TAKE THE ORIGINAL HOOKS OFF
 -ENLEVER LES CROCHETS ORIGINAUX
 -DIE ORIGINALHAKEN ABNEHMEN
 -QUITAR LOS GANCHOS ORIGINALES

12



DADO AL RIAS M6
 HIGH-RISE BOLT
 ECOLI BAISSE
 SPECIAL WALTER
 TUBERCA ESPECIAL
 Q.TY n.2

13

KIT MONORACK 1F
 Q.TY n.1

