


PIASTRA SPECIFICA - SPECIFIC PLATE
PLATINE SPECIFIQUE - SPEZIFISCHE PLATTE - PLETINA ESPECÍFICA

BMW R1100RS '96/'00


ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

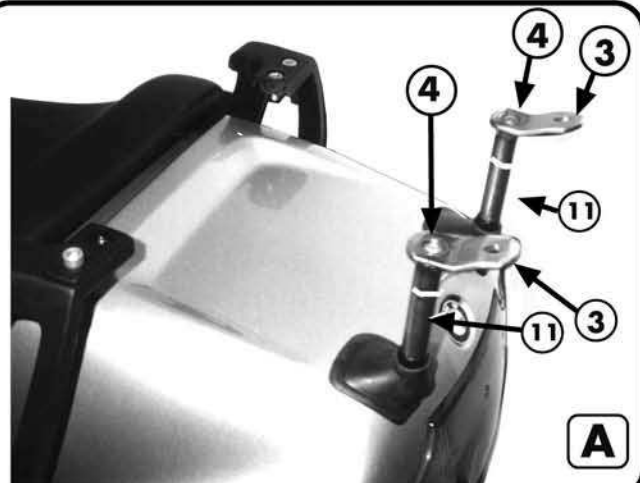



A



-TOGLIERE IL PORTAPACCHINO ORIGINALE
-TAKE OFF THE ORIGINAL LUGGAGE CARRIER
-ENLEVER LE PORTE PAQUETS ORIGINAL

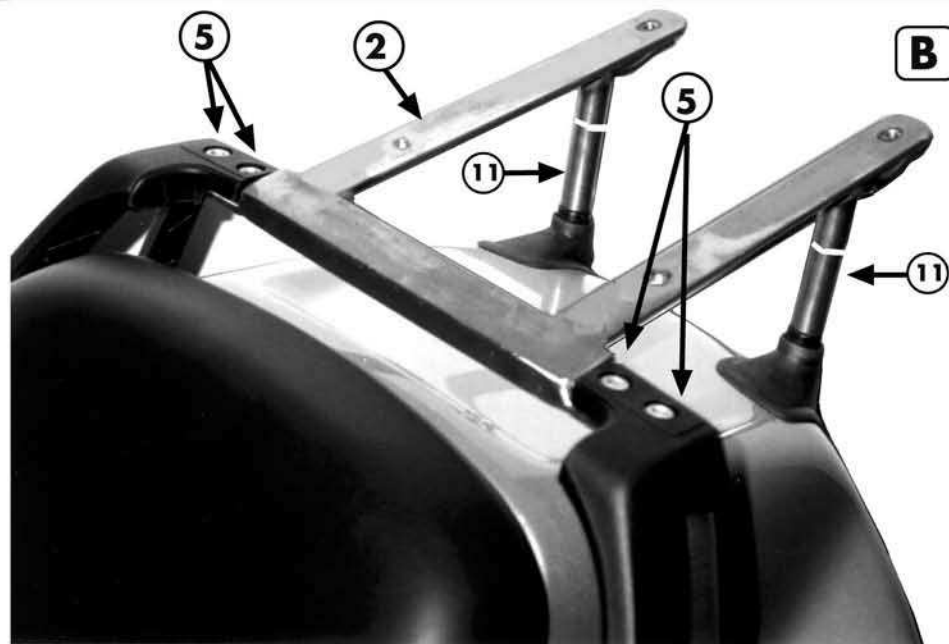

B

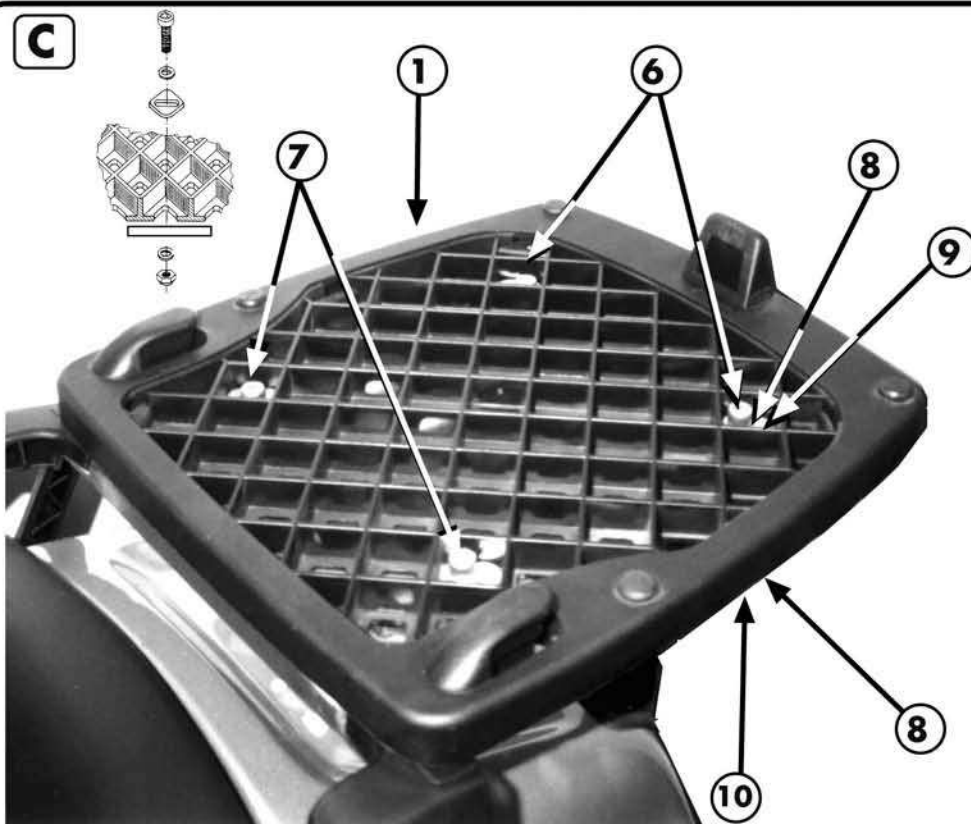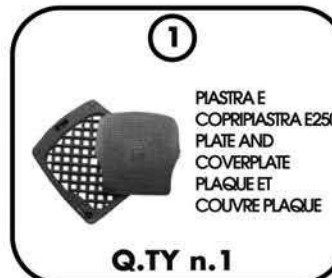

C