

PIASTRA SPECIFICA - SPECIFIC PLATE  
PLATINE SPECIFIQUE - SPEZIFISCHE PLATTE - PLETINA ESPECÍFICA

**SUZUKI DL650 V-STROM**  
**SUZUKI DL1000 V-STROM**  
**KAWASAKI KLV1000**

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE




**PIASTRINA ANTERIORE**  
SCREW M8x16  
VIS M8x16  
SCHRAUBE M8x16  
TORNILLO M8x16

**Q.TY n.1**



**PIASTRINA POSTERIORE**  
SCREW M8x16  
VIS M8x16  
SCHRAUBE M8x16  
TORNILLO M8x16

**Q.TY n.1**

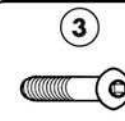


**VITE TBEI M6x20**  
SCREW M6x20  
VIS M6x20  
SCHRAUBE M6x20  
TORNILLO M6x20

**Q.TY n.4**



**DADO A.B. M6**  
FLANGIATO  
BOLT M6  
ECROU M6  
MUTTER M6  
TUERCA M6

**Q.TY n.8**

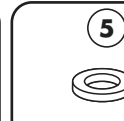

**RONDELLA fl6mm**  
WASHER Ø6mm  
RONDELLE Ø6mm  
SCHEIBE Ø6mm  
ARANDELA Ø6mm

**Q.TY n.4**



**PARTICOLARI INCLUSI NEL KIT VITERIA DELLA PIASTRA**  
COMPONENTS INCLUDED IN THE FITTING KIT OF THE PLATE  
PIÈCES INCLUES DANS LE KIT DE VIS DE LA PLATINE  
DIE EINZELNEN TEILE SIND BEI MONTAGEKIT DER PLATTE ENTHALTEN  
DESPIECES INCLUIDOS EN EL KIT DE ANCLAJES DE LA PARRILLA

**Q.TY n.-**

TOGLIERE LA GOMMA  
COPRIPORTAPACCHI ORIGINALE

TAKE OFF THE RUBBER COVERING THE  
ORIGINAL CARRIER

ENLEVER LA GOMME QUI COUVRE LE  
PORTE BAGAGE ORIGINAL

ENTFERNEN SIE ZUERST DIE  
GUMMIABDECKUNG VON DEM  
ORIGINAL GEPÄCKTRÄGER

QUITAR LA GOMA CUBRE PORTA  
EQUIPAJE ORIGINAL

**A**

PER MONTARE LE PIASTRINE ① E ② TOGLIERE IL  
PORTAPACCHI ORIGINALE

TO MOUNT THE SMALL PLATES ① AND ② TAKE  
OFF THE ORIGINAL CARRIER

POUR MONTER LES PLATINES ① ET ② ENLEVER  
LE PORTE BAGAGES ORIGINAL

MONTIEREN SIE DEN ORIGINAL GEPÄCKTRÄGER  
AB, UM JETZT DIE PLATTCHEN ① UND ②  
MONTIEREN ZU KÖNNEN

POR MONTAR LA PLATINA ① Y ② QUITAR EL  
PORTAEQUIPAJE ORIGINAL

**B1**

### ATTENZIONE

CARICO MASSIMO 5Kg.

**WARNING:** MAX LOAD 5Kg.

### ATTENTION:

CHARGE MAXIMUM 5Kg.

**ACHTUNG:** MAX 5Kg.

### ¡ATENCIÓN!:

CARGA MÁXIMA 5 Kg.

© Copyright 30072007MV-Rev00, 1/1

