

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR
 KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR
 ANCLAJE ESPECIFICO PARA

SUZUKI BURGMAN 250 '98

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

①

 AIRSTAR
 Q.TY n.1

②

 KIT ATTACCHI
 FITTING KIT
 KIT SPECIFIQUE DE
 FIXATION
 Q.TY n.2

③

 VITE TCEI M 5 X 25
 SCREW M 5 X 25
 VIS M 5 X 25
 Q.TY n.2

④

 DADO M5
 NUT M 5
 ECROU M 5
 Q.TY n.2

⑤



 GOMMINO
 ORIGINALE
 ORIGINAL RUBBER
 CAOUTCHOUC
 ORIGINAL
 Q.TY n.-


⑥

 VITE ORIGINALE
 ORIGINAL SCREW
 VIS ORIGINAL
 Q.TY n.-

⑦


 VITE TBEI
 M6x30mm
 SCREW
 VIS
 SCHRAUBE
 TORNILLO
 Q.TY n.2

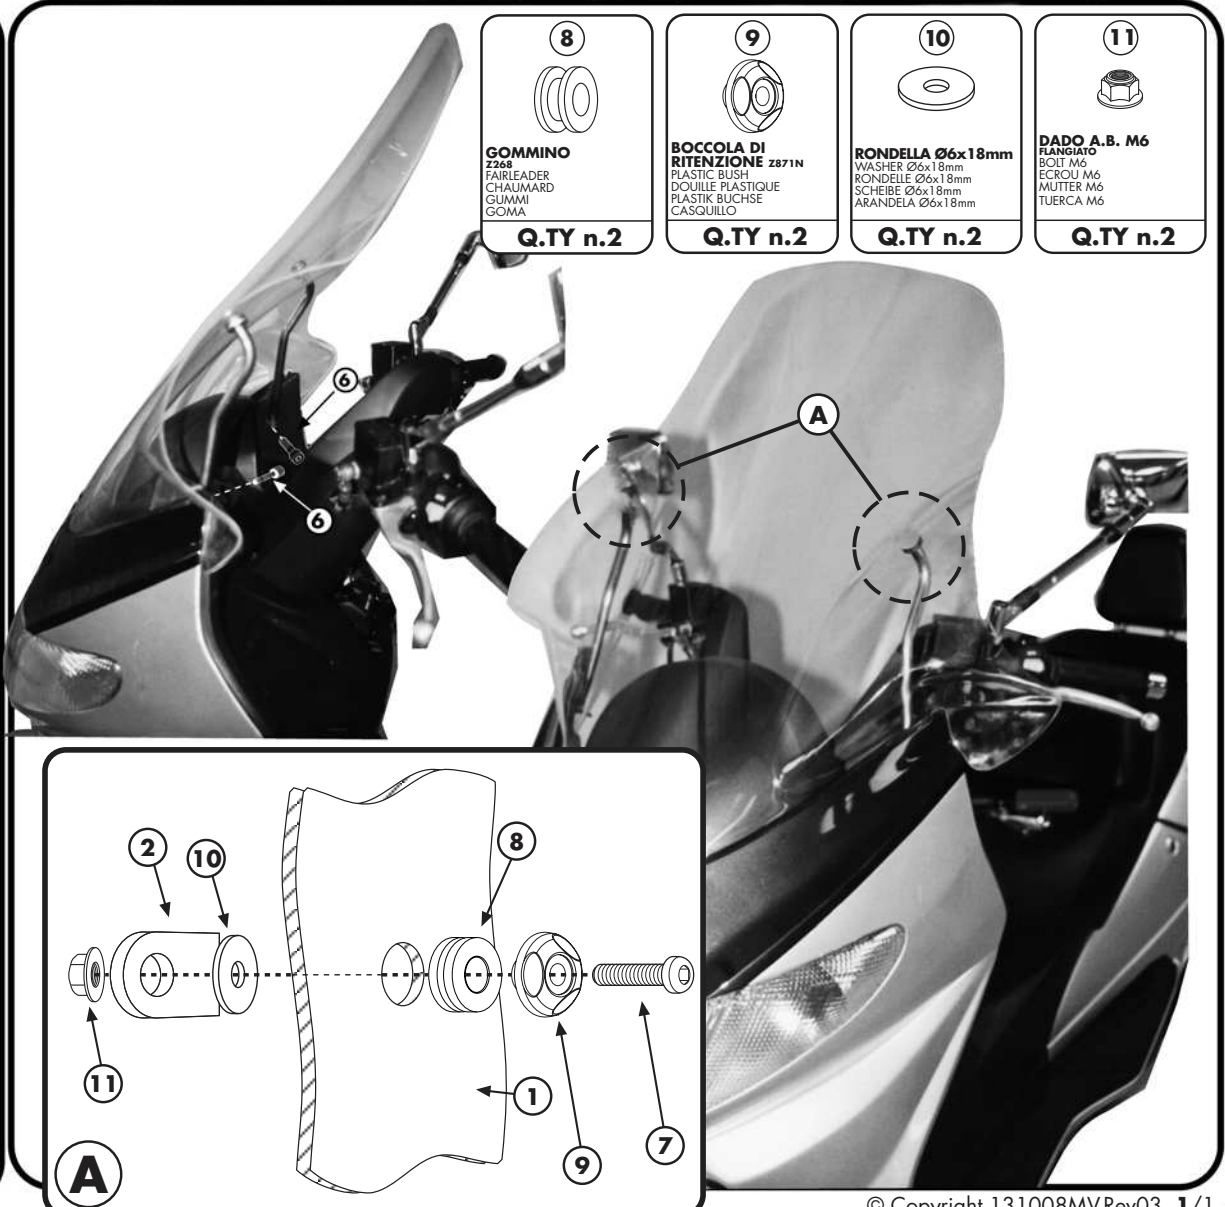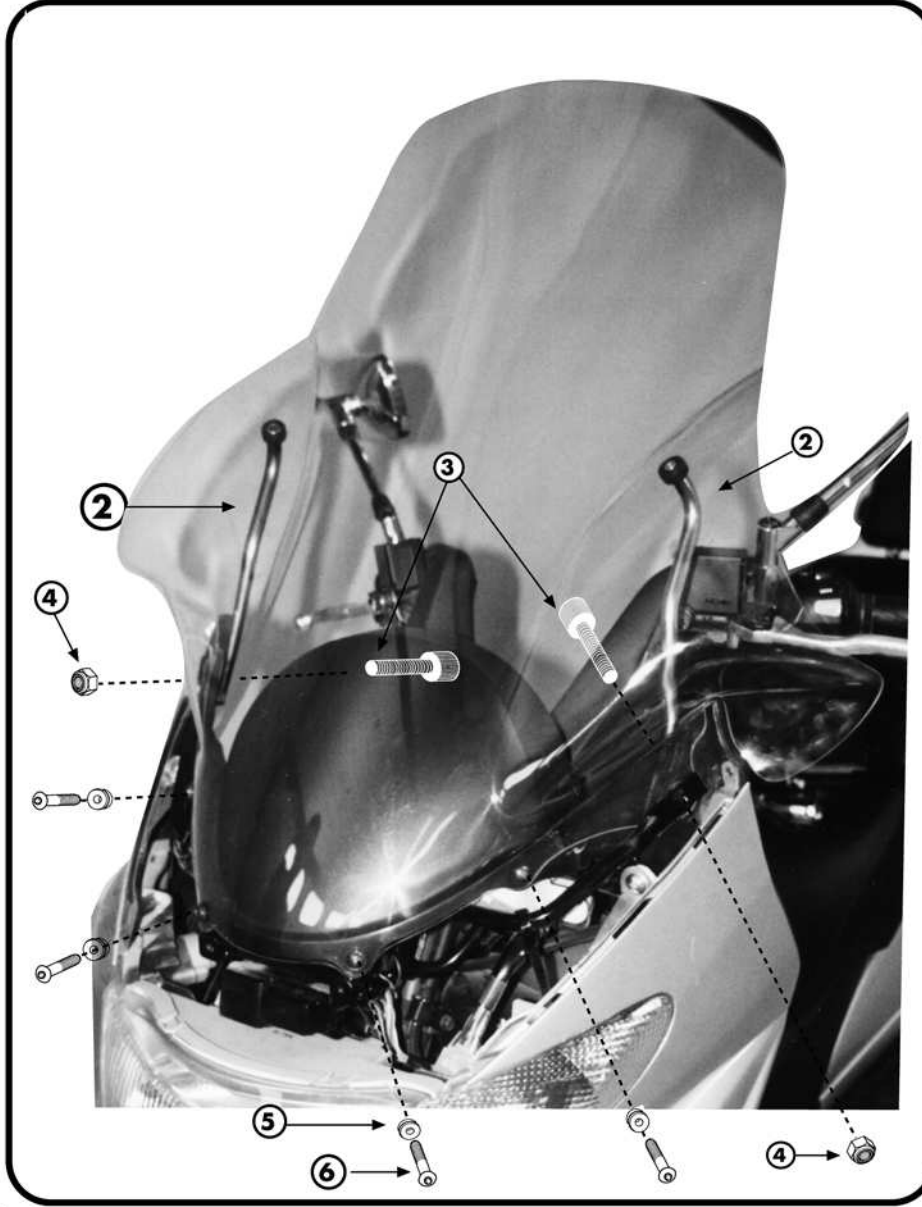


⑧

 GOMMINO
 Z268
 FAIRLEADER
 CHAUMARD
 GUMMI
 GOMA
 Q.TY n.2

⑨

 BOCCOLA DI
 RITENZIONE Z871N
 PLASTIC BUSH
 DOUILLE PLASTIQUE
 PLASTIK BÜCHSE
 CASQUILLO
 Q.TY n.2

⑩

 RONDELLA Ø6x18mm
 WASHER Ø6x18mm
 RONDELLE Ø6x18mm
 SCHEIBE Ø6x18mm
 ARANDELA Ø6x18mm
 Q.TY n.2

⑪

 DADO A.B. M6
 FLANGIATO
 BOLT M6
 ECROU M6
 MUTTER M6
 TUERCA M6
 Q.TY n.2

