

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR  
 KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR  
 ANLAJE ESPECÍFICO PARA

# KAWASAKI KLR 650 2008

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE


**1**



**SUPPORTO**  
 SUPPORT  
 SUPPORT  
 HALTERUNG  
 SOPORTE

**Q.TY n.2(Dx-Sx)**


**2**



**VITE TBEI M6x16mm**  
 SCREW  
 VIS  
 SCHRAUBE  
 TORNILLO

**Q.TY n.4**


**3**



**VITE TEF M6x35mm**  
 SCREW  
 VIS  
 SCHRAUBE  
 TORNILLO

**Q.TY n.2**


**4**



**RONDELLA Ø6mm**  
 WASHER Ø6mm  
 RONDELLE Ø6mm  
 SCHEIBE Ø6mm  
 ARANDELA Ø6mm

**Q.TY n.4**

**5**



**MOUSSE**  
 RUBBER PADS  
 MOUSSE  
 SCHUTZGUMMI  
 ESPUMA ADHESIVA

**Q.TY n.8**

**6**






**NON INCLUSO**  
 NOT INCLUDED IN THE BOX  
 PAS INCLUS DANS LA BOITE  
 NICHT ENTHALTEN IN  
 DER VERPACKUNG  
 NO ESTÁ INCLUIDO EN  
 EL PAQUETE

**7**

**COMPONENTI ORIGINALI**  
 ORIGINAL PARTS  
 PARTIES ORIGINALES  
 ORIGINAL BAUTEILE  
 COMPONENTES ORIGINALES

**Q.TY n.-**

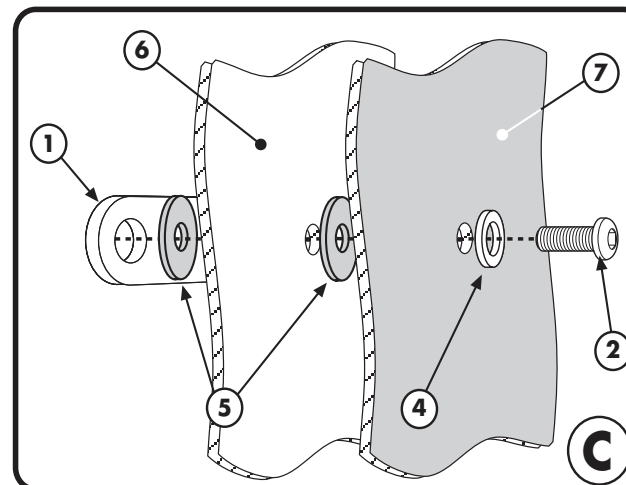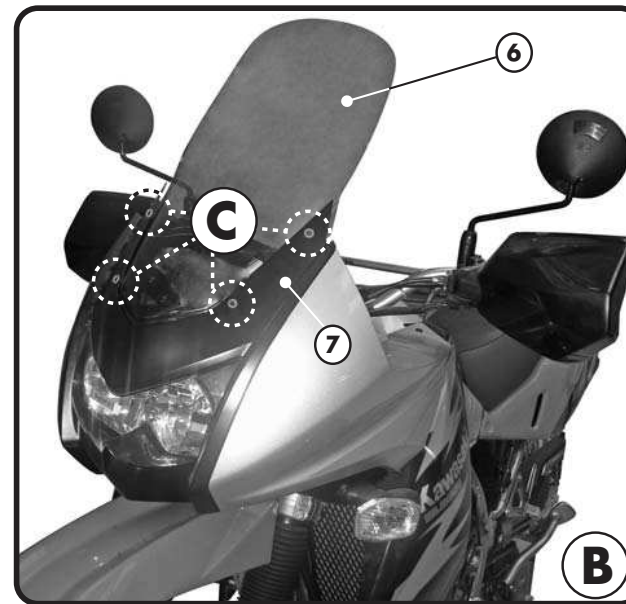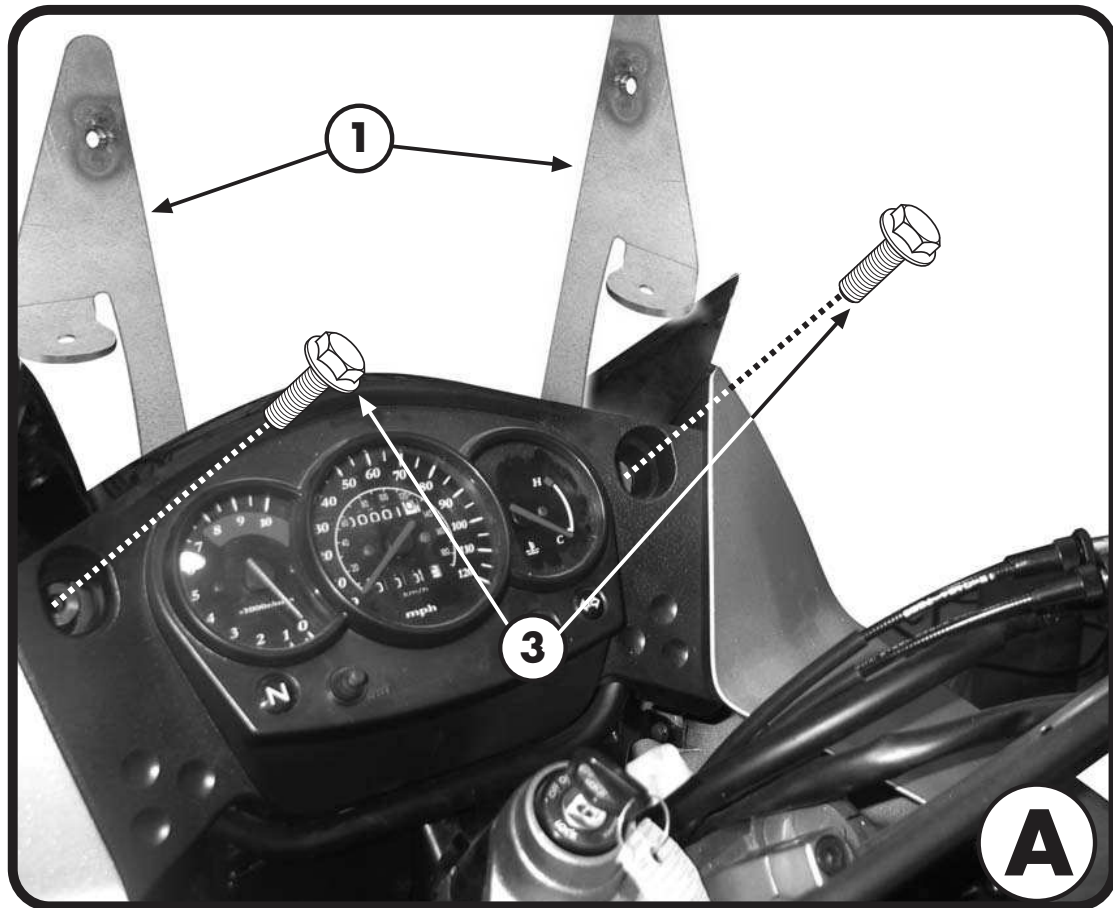

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR  
KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR  
ANLAJE ESPECÍFICO PARA

**KAWASAKI KLR 650 2008**

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

## I ISTRUZIONI DI MONTAGGIO

1. DOPO AVER SMONTATO IL PARABREZZA ORIGINALE, INSERIRE E FISSARE I 2 SUPPORTI N°1 COME INDICATO IN FIGURA A;
2. POSIZIONARE IL PARABREZZA COME INDICATO IN FIGURA B;
3. PROCEDERE AL FISSAGGIO DEL PARABREZZA COME MOSTRATO IN FIGURA C.

## GB MOUNTING INSTRUCTIONS

1. AFTER REMOVING THE ORIGINAL WIND-SCREEN, INSTALL THE TWO SUPPORTS, ITEM N°1, AS SHOWN IN PICTURE A;
2. SET THE WIND-SCREEN IN POSITION AS SHOWN IN PICTURE B;
3. FOLLOW THE INSTALLATION PROCEEDURE FOR THE WIND-SCREEN AS DIAGRAMMED IN PICTURE C.

## F INSTRUCTIONS DE MONTAGE

1. APRES AVOIR DEMONTE LE PARE-BRISE D'ORIGINE, INSERER ET FIXER LES DEUX SUPPORTS N°1 COMME INDIQUE EN PHOTO A;
2. POSITIONNER LE PARE-BRISE COMME INDIQUE EN PHOTO B;
3. PROCEDER A LA FIXATION DU PARE-BRISE COMME ILLUSTRE EN PHOTO C.

## D BAUANLEITUNG

1. DEMONTIEREN SIE DIE ORIGINALSCHEIBE UND BEFESTIGEN SIE DIE 2 HALTERUNGEN (POSITION NR. 1) WIE IM BILD A GEZEIGT;
2. POSITIONIEREN SIE DIE SCHEIBE WIE IM BILD B GEZEIGT;
3. BEFESTIGEN SIE DIE SCHEIBE WIE IM BILD C GEZEIGT.

## ES INSTRUCCIONES DE MONTAJE

1. DESPUÉS DE HABER DESMONTADO EL PARABRISAS ORIGINAL , INSERTAR Y FIJAR LOS DOS SOPORTES N.1 COMO ESTÁ INDICADO EN LA FOTO "A";
2. COLOCAR EL PARABRISAS COMO SE INDICA EL LA FOTO "B";
3. PROCEDER FIJANDO EL PARABRISAS COMO FIGURA EN LA ILUSTRACIÓN " C".